 
 

 





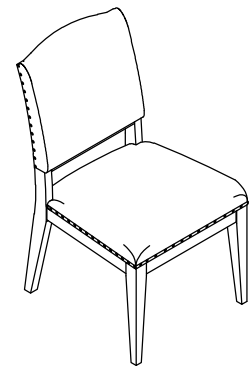


**Warning :**

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

**Components and Hardware List**


<p>Chair Back</p>  <p><b>A</b> 1 pc.</p>	<p>Seat Frame</p>  <p><b>B</b> 1 pc.</p>	<p>Front Leg</p>  <p><b>C</b> 2 pcs.</p>	<p>Allen Head Bolt Ø5/16"-18 x 2"</p>  <p><b>D</b> 5 pcs.</p>	<p>Allen Head Bolt Ø5/16"-18 x 3"</p>  <p><b>E</b> 4 pcs.</p>
<p>Spring Washer Ø5/16"</p>  <p><b>F</b> 9 pcs.</p>	<p>Flat Washer Ø5/16" x 19*2mm</p>  <p><b>G</b> 9 pcs.</p>	<p>Allen Key 5mm</p>  <p><b>H</b> 1 pc.</p>	<p>Upholstery Tack</p>  <p>4 pcs.</p>	




#59452

Uph Side Dinning Chair 2in


**Step 1:**

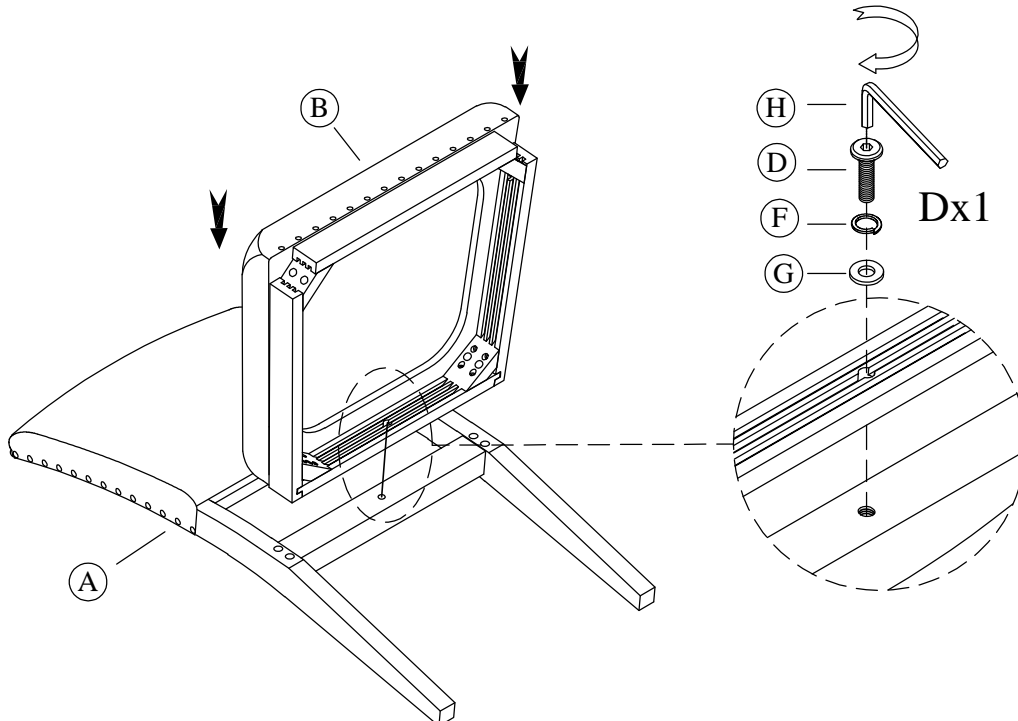


## Step 2:

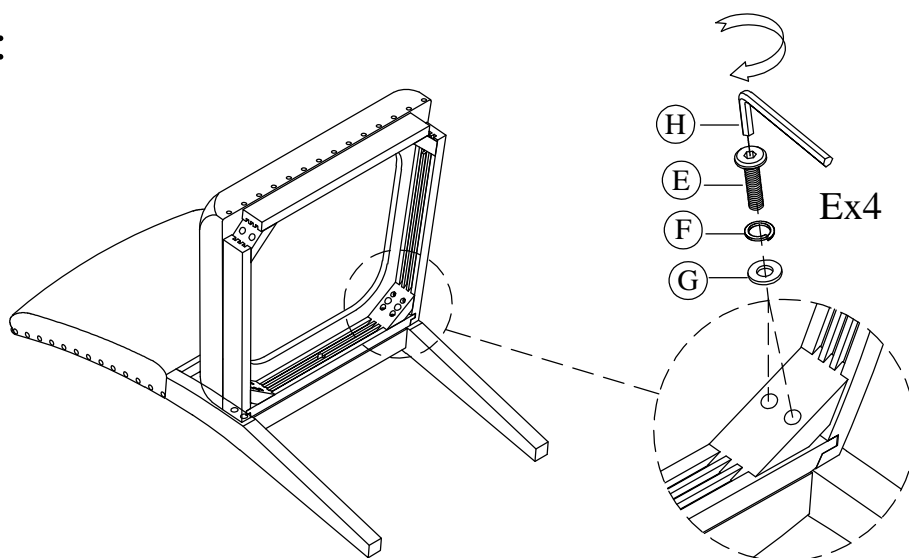

## Step 3:

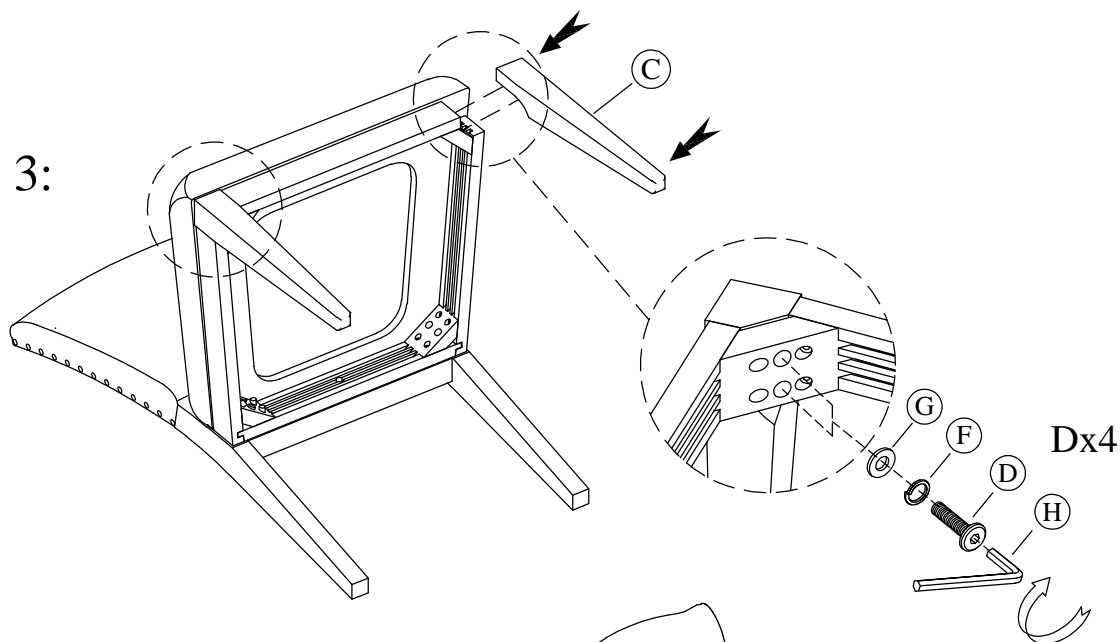

## Complete

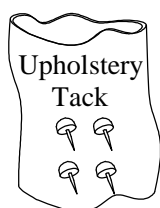

If a tack comes loose, use a hammer to tap it back into place or replace it with a new one.

