





 
 
 
 


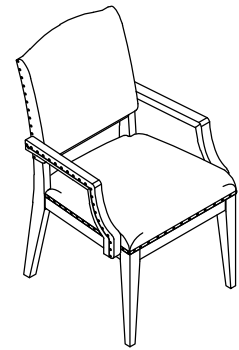







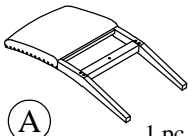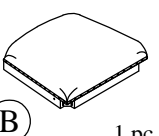Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.




#59453
Uph Arm Dining Chair 2in


Components and Hardware List

Chair Back	Seat Frame	Front Leg	Left Arm	Right Arm		
 A 1 pc.	 B 1 pc.	 C 2 pcs.	 D 1 pc.	 E 1 pc.		
Allen Head Bolt Ø5/16"-18 x 2"  F 5 pcs.	Allen Head Bolt Ø5/16"-18 x 3"  G 4 pcs.	Spring Washer Ø5/16"  H 9 pcs.	Flat Washer Ø5/16" x 19*2mm  I 9 pcs.	Allen Key 5mm  J 1 pc.	Allen Head Bolt Ø1/4"-20 x 1-3/4"  K	Spring Washer Ø1/4"  L 9 pcs.
Flat Washer Ø1/4" x 16*2mm  M 9 pcs.	Allen Key 4mm  N 1 pc.	Wood Screw #8 x 1-1/2"  O 2 pcs.	Screw Driver not included 	Upholstery Tack  P 4 pcs.		


Step 1:

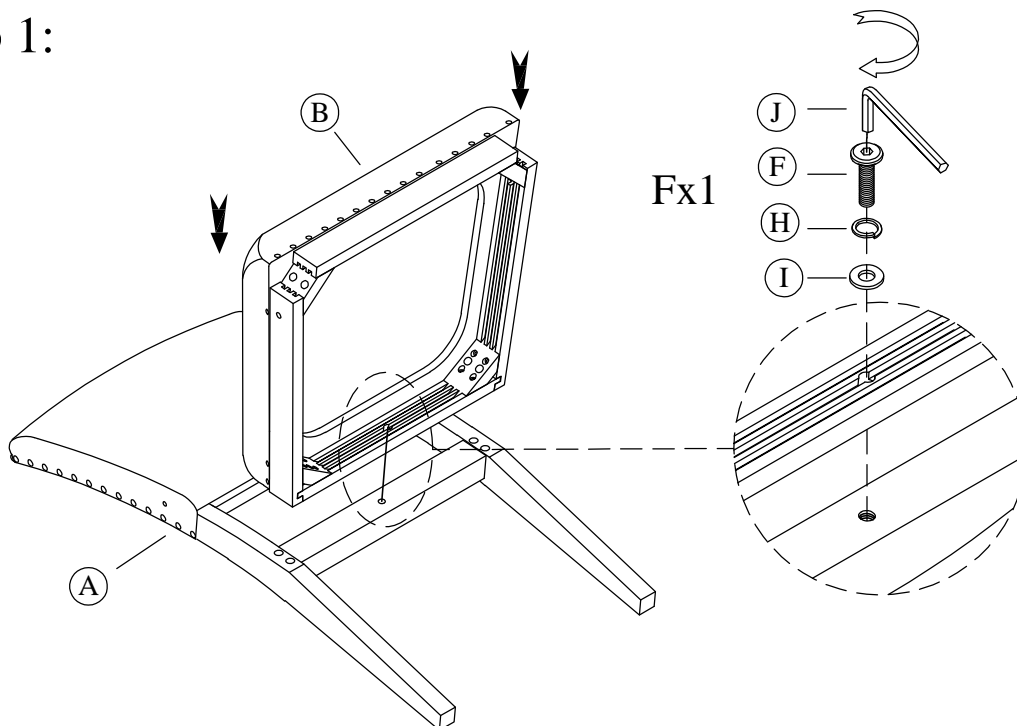


Step 2:

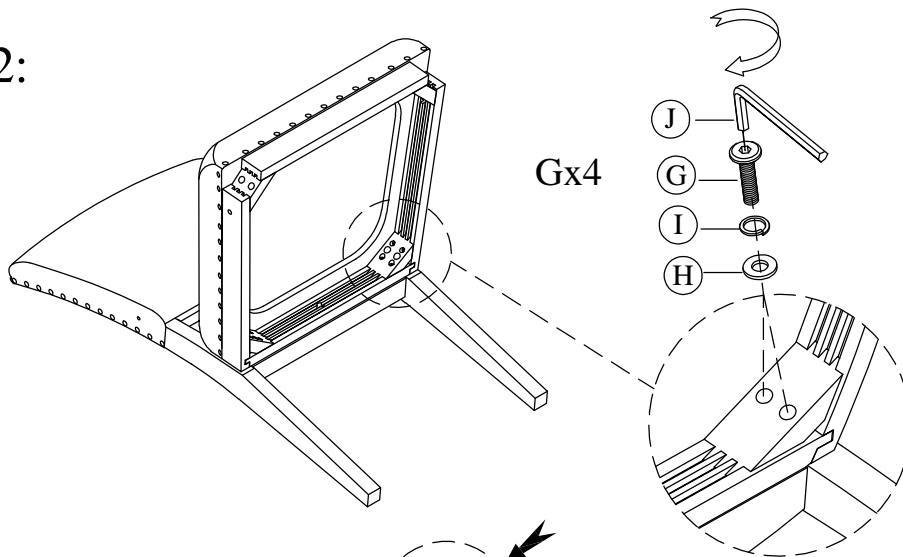

Step 3:

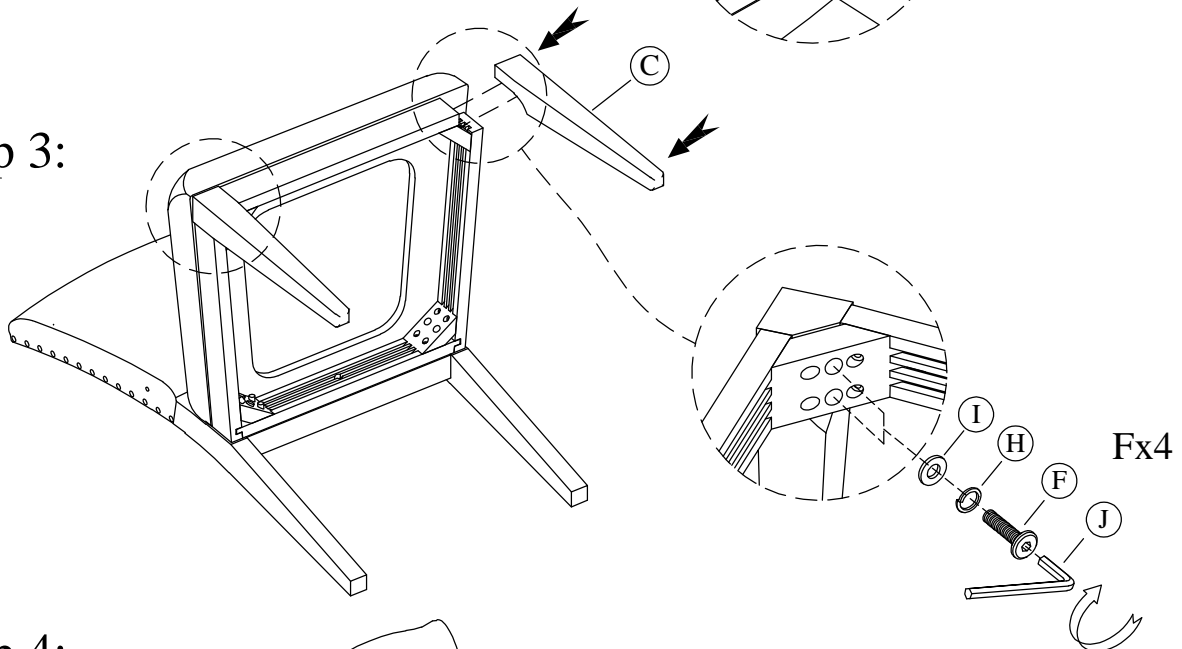

Step 4:

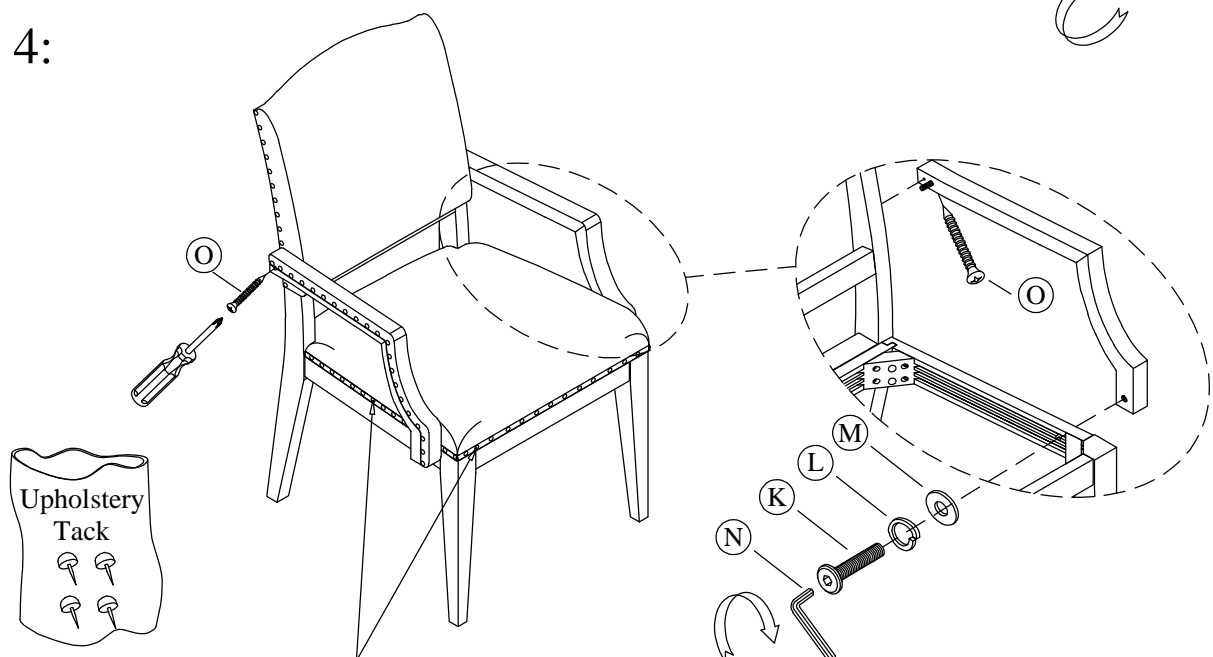

If a tack comes loose, use a hammer to tap it back into place or replace it with a new one.