






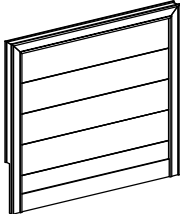









Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.







Hardware and Parts packed with the Headboard

<div>Twin Panel Headboard - 30710</div> <div></div> <div><div>H-A</div><div>1 pc</div></div>	<div>Headboard Post (Left)</div> <div></div> <div><div>H-B</div><div>1 pc</div></div>	<div>Headboard Post (Right)</div> <div></div> <div><div>H-C</div><div>1 pc</div></div>	<div>Headboard Stretcher</div> <div></div> <div><div>H-D</div><div>1 pc</div></div>		
<div>Allen Head Bolt M6-32 x 40mm</div> <div></div> <div><div>H-E</div><div>2 pcs</div></div>	<div>Flat Washer Ø6 x Ø13mm</div> <div></div> <div><div>H-F</div><div>2 pcs</div></div>	<div>Lock Washer Ø9 x Ø13mm</div> <div></div> <div><div>H-G</div><div>8 pcs</div></div>	<div>Allen Head Bolt M8-32 x 55mm</div> <div></div> <div><div>H-H</div><div>6 pcs</div></div>	<div>Flat Washer Ø8 x Ø20mm</div> <div></div> <div><div>H-I</div><div>6 pcs</div></div>	<div>Allen Key 4 x 110mm</div> <div></div> <div><div>H-J</div><div>1 pc</div></div>

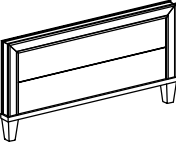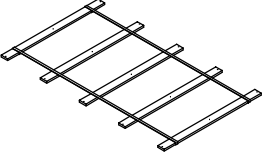Hardware and Parts packed with the Footboard

<p>Twin Panel Footboard - 30711</p>  <p>(F-A) 1 pc</p>	<p>Wood Slat (40-1/2" long)</p>  <p>(F-B) 1 set</p>	<p>Support leg (7-3/4" x 1-1/4" x 1-1/4")</p>  <p>(F-C) 5 pcs</p>	<p>Wood Screw Ø4 x 25mm</p>  <p>(F-D) 10 pcs</p>	<p>Tool Required (not provided) Phillips Screwdriver</p> 
---	--	--	---	--

Hardware and Parts packed with the Bed Rails

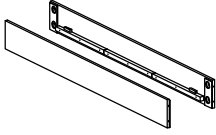
<p>Bed Rails - 30779</p>  <p>(R-A) 2 pcs</p>	<p>Thread Bolt M8-32 x 70mm</p>  <p>(R-B) 8 pcs</p>	<p>Arc Washer 14 x 26mm</p>  <p>(R-C) 8 pcs</p>	<p>Lock Washer Ø10 x Ø15mm</p>  <p>(R-D) 8 pcs</p>	<p>Hex Nut M8-32 x 7mm</p>  <p>(R-E) 8 pcs</p>	<p>Open Wrench 13 mm</p>  <p>(R-F) 1 pc</p>
--	--	--	---	---	--

3/3 Twin Bed

30710 - 3/3 Panel Headboard

30711 - 3/3 Panel Footboard


30779 - 3/3-4/6 Bed Rails

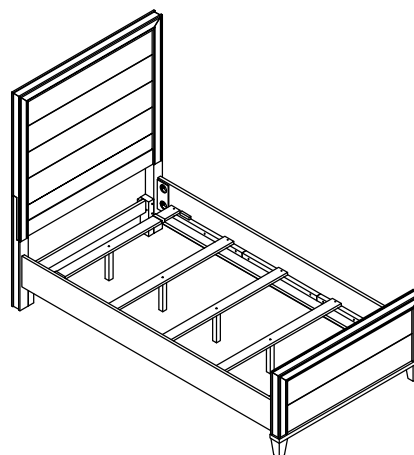


STEP 1

3/3 Twin Bed


30710 - 3/3 Panel Headboard

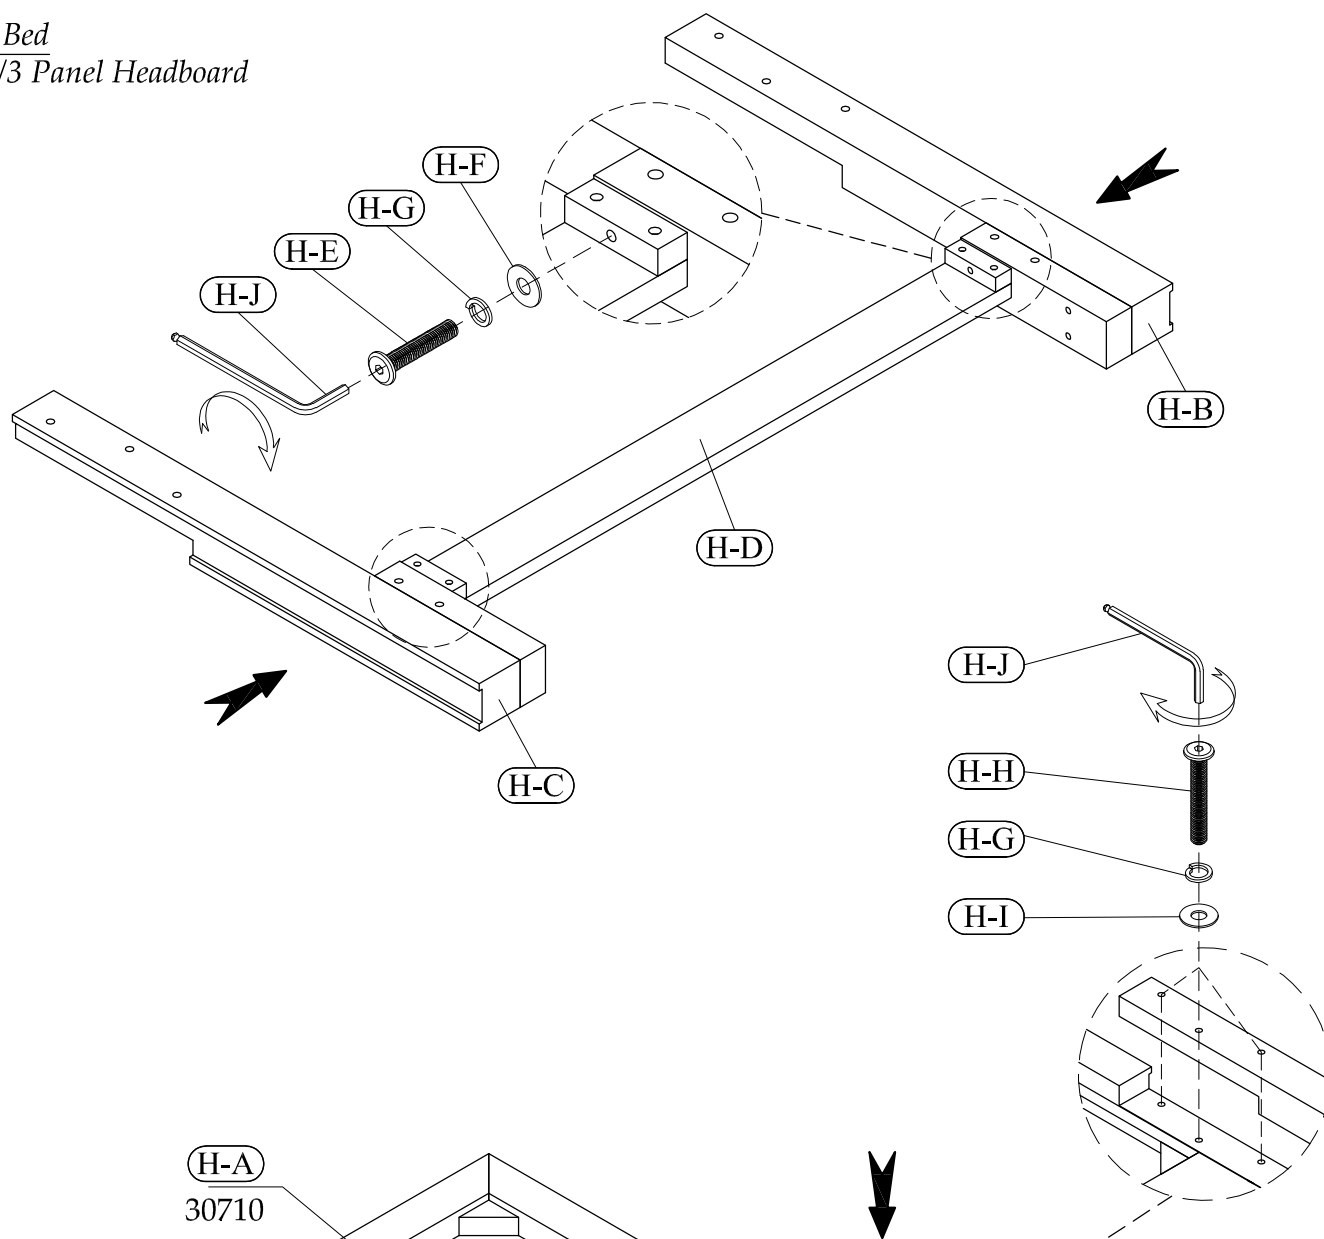


STEP 2

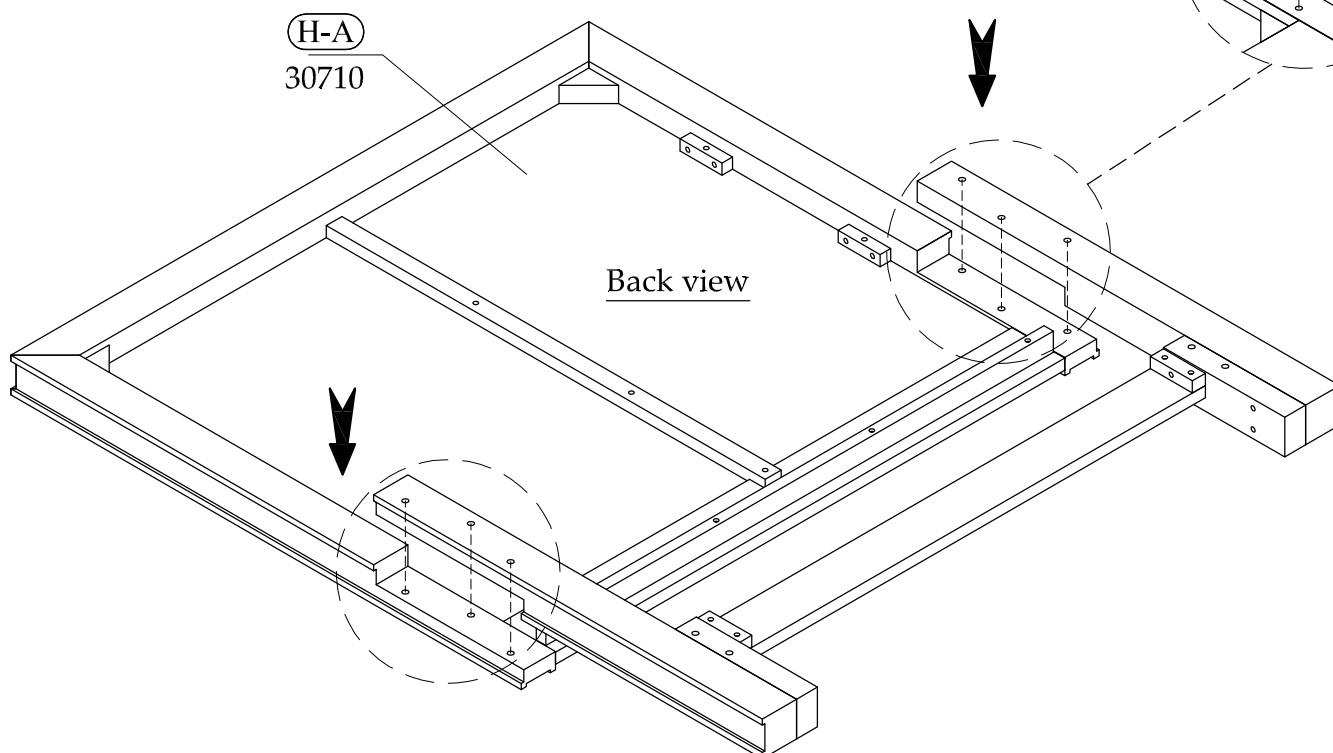


STEP 3

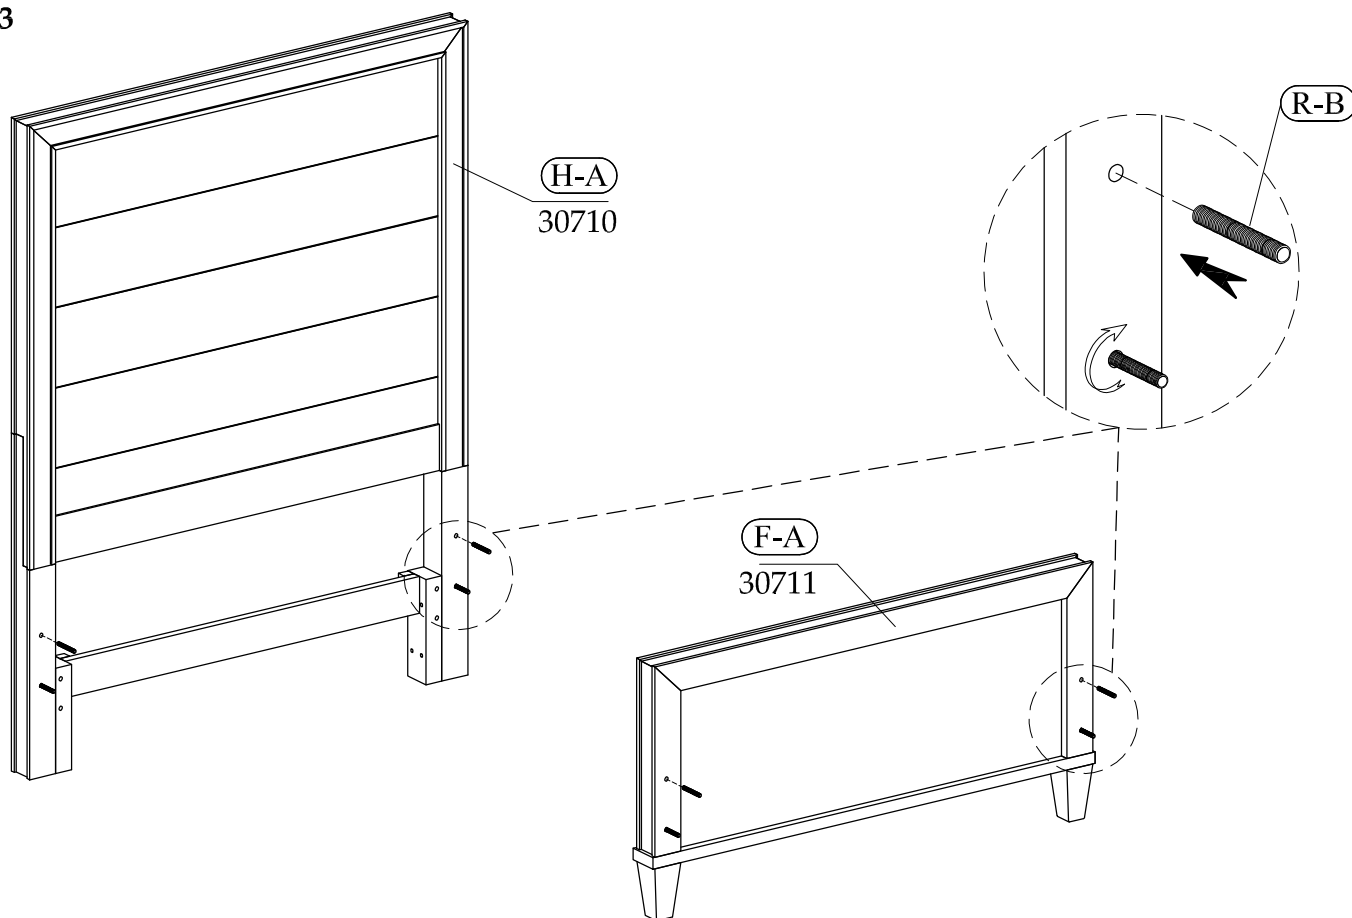


STEP 4

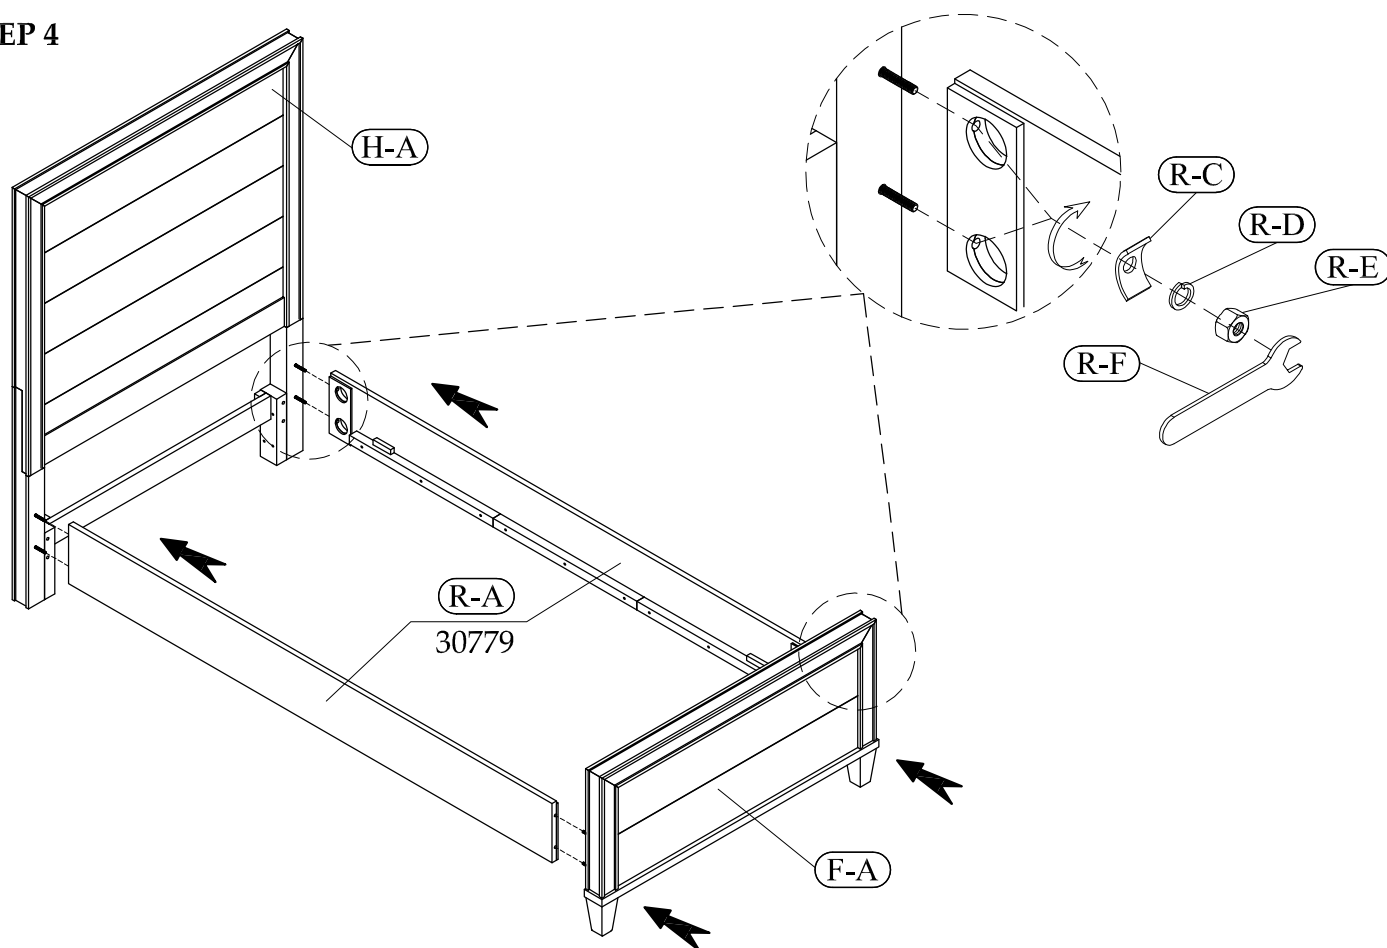


STEP 5

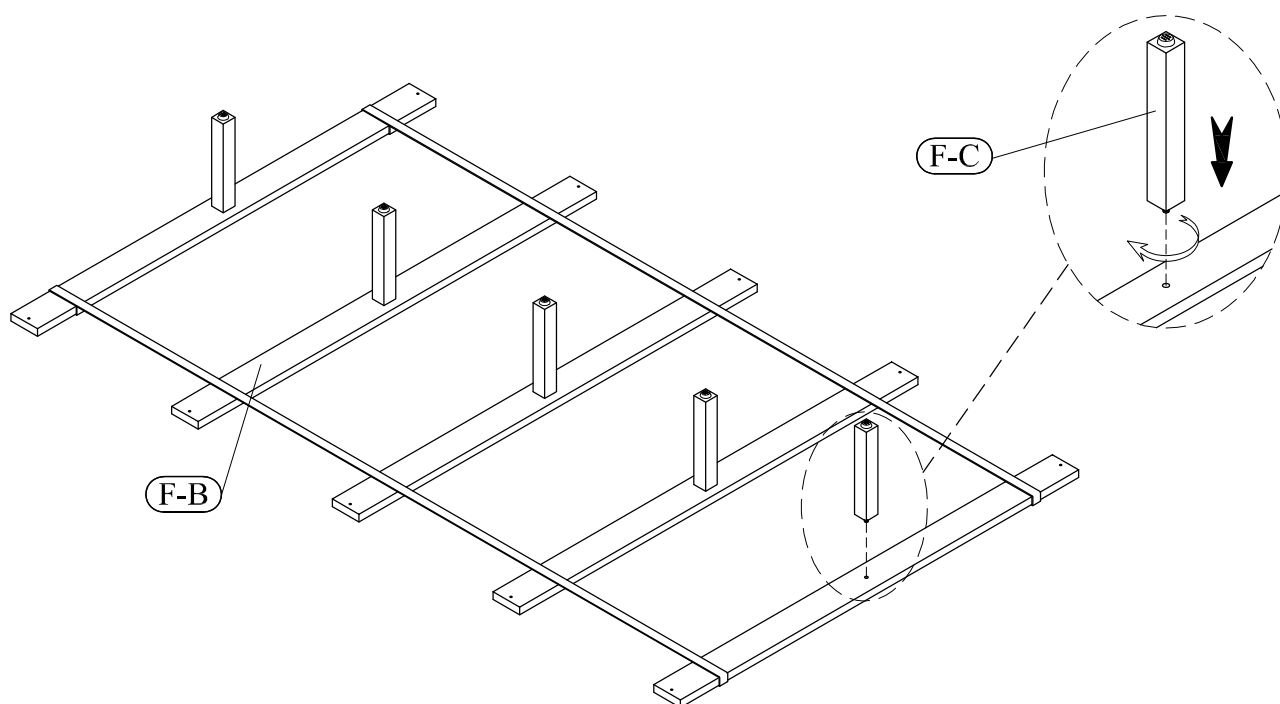

STEP 6

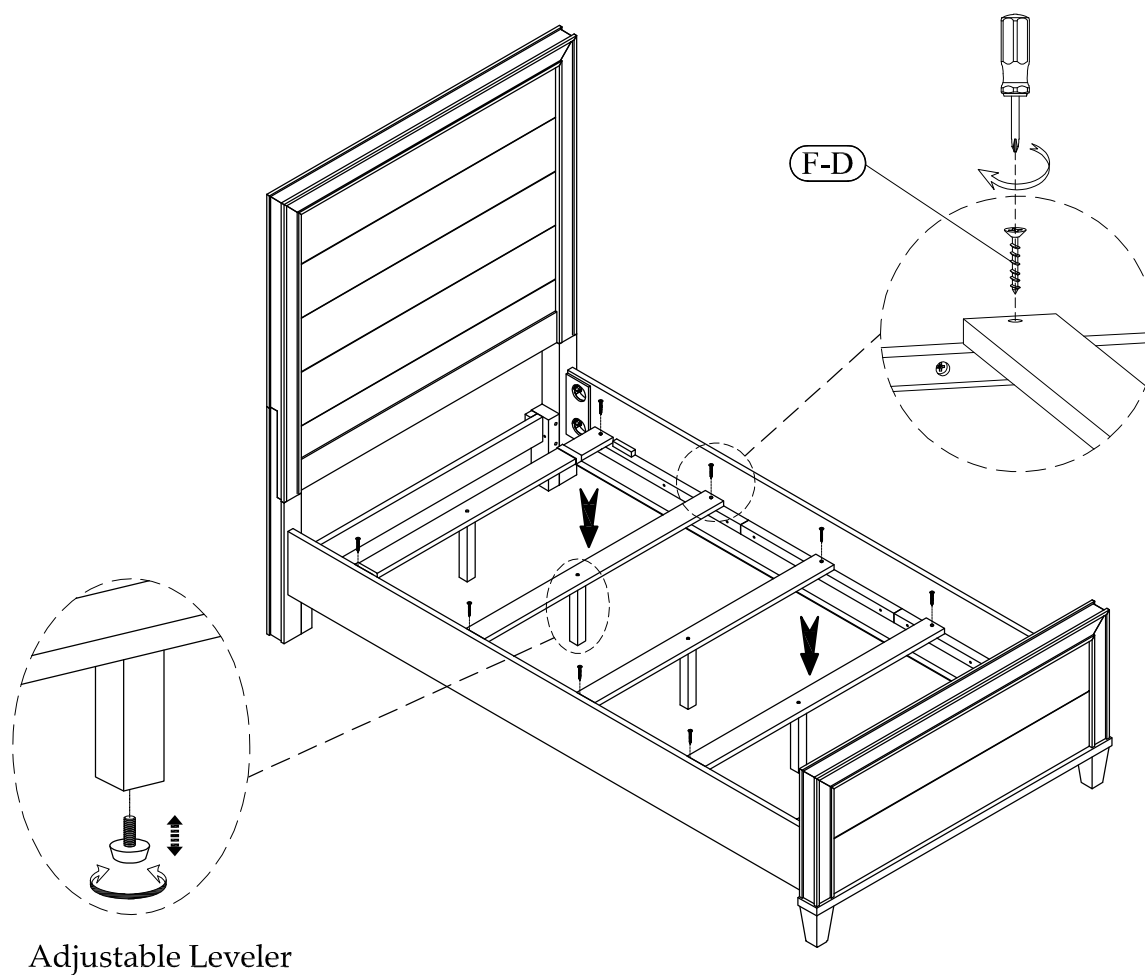

3/3 Twin Bed
30710 - 3/3 Panel Headboard

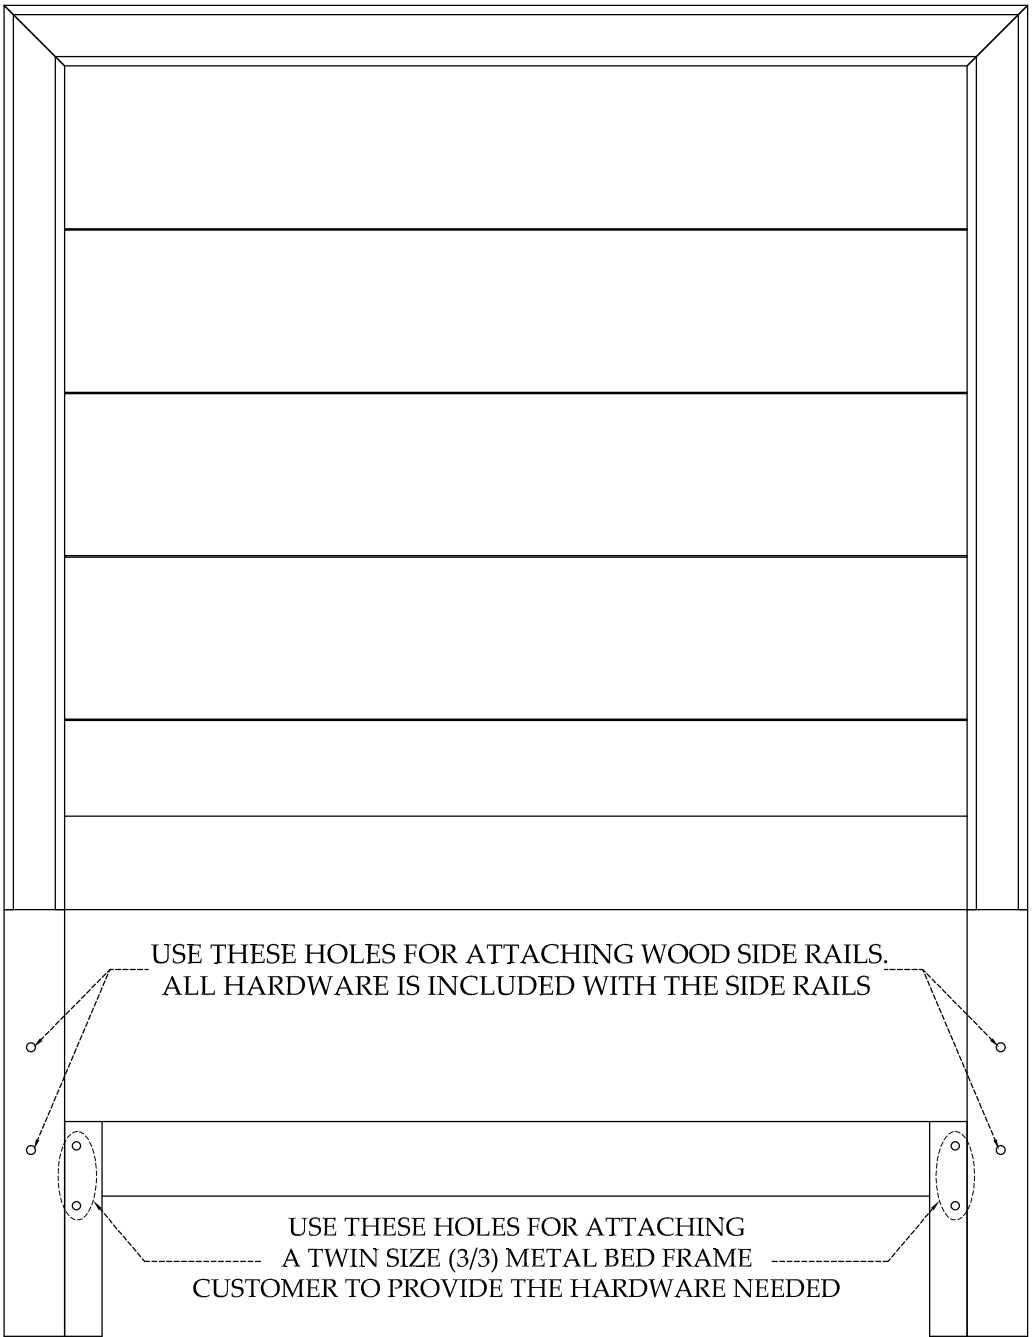

THE HEADBOARD MAY BE USED ALONE WITH
A TWIN SIZE METAL BED FRAME