






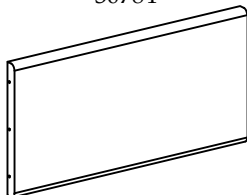





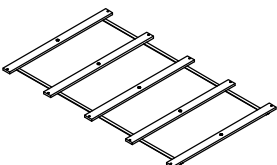



#### Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.







#### Hardware and Parts packed with the Headboard

<div>Full Upholstered Headboard - 30784</div> <div></div> <div><div>H-A</div><div>1 pc</div></div>	<div>Headboard Post (Left)</div> <div></div> <div><div>H-B</div><div>1 pc</div></div>	<div>Headboard Post (Right)</div> <div></div> <div><div>H-C</div><div>1 pc</div></div>	<div>Headboard Stretcher</div> <div></div> <div><div>H-D</div><div>1 pc</div></div>		
<div>Allen Head Bolt M6-32 x 40mm</div> <div></div> <div><div>H-E</div><div>2 pcs</div></div>	<div>Flat Washer Ø6 x Ø13mm</div> <div></div> <div><div>H-F</div><div>2 pcs</div></div>	<div>Lock Washer Ø9 x Ø13mm</div> <div></div> <div><div>H-G</div><div>8 pcs</div></div>	<div>Allen Head Bolt M8-32 x 60mm</div> <div></div> <div><div>H-H</div><div>6 pcs</div></div>	<div>Flat Washer Ø8 x Ø20mm</div> <div></div> <div><div>H-I</div><div>6 pcs</div></div>	<div>Allen Key 4 x 110mm</div> <div></div> <div><div>H-J</div><div>1 pc</div></div>

#### Hardware and Parts packed with the Footboard

Full Upholstered Footboard - 30785 	Wood Slat (55-1/2" long) 	Support leg (8-3/4" x 1-1/4" x 1-1/4") 	Wood Screw Ø4 x 25mm 	Tool Required (not provided) Phillips Screwdriver 
(F-A) 1 pc	(F-B) 1 set	(F-C) 5 pcs	(F-D) 10 pcs	
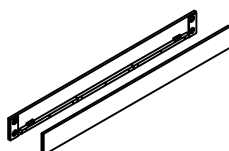
#### Hardware and Parts packed with the Bed Rails


Bed Rails - 30779 	Thread Bolt M8-32 x 70mm 	Arc Washer 14 x 26mm 	Lock Washer Ø10 x Ø15mm 	Hex Nut M8-32 x 7mm 	Open Wrench 13 mm 
(R-A) 2 pcs	(R-B) 8 pcs	(R-C) 8 pcs	(R-D) 8 pcs	(R-E) 8 pcs	(R-F) 1 pc

#### 4/6 Full Bed

30784 - 4/6 Upholstered Headboard

30785 - 4/6 Upholstered Footboard


30779 - 3/3-4/6 Twin-Full Bed Rails

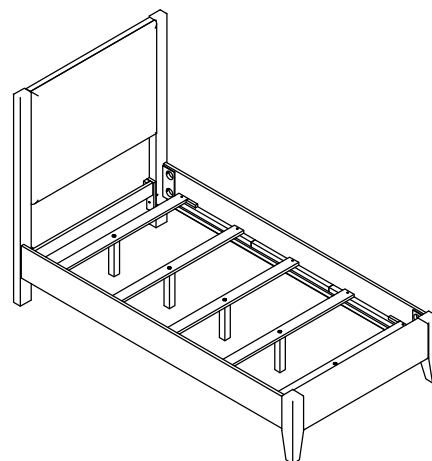


4/6 Full Bed

30784 - 4/6 Upholstered Headboard


**STEP 1 : Open the back fabric**

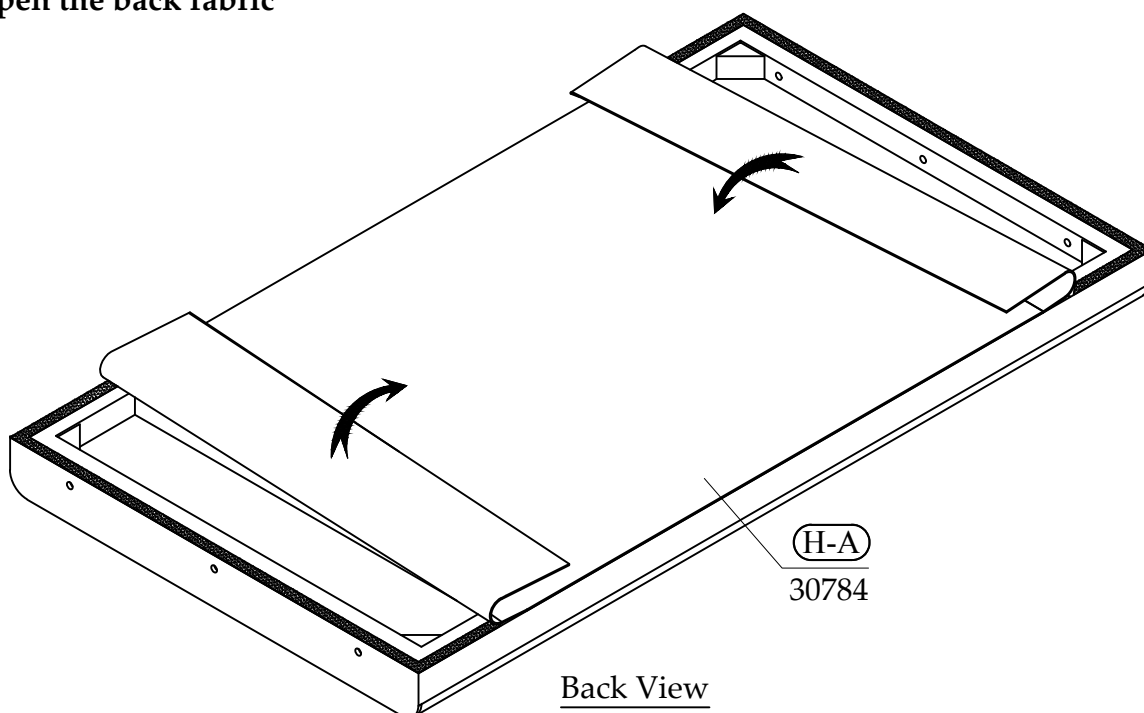


**STEP 2**

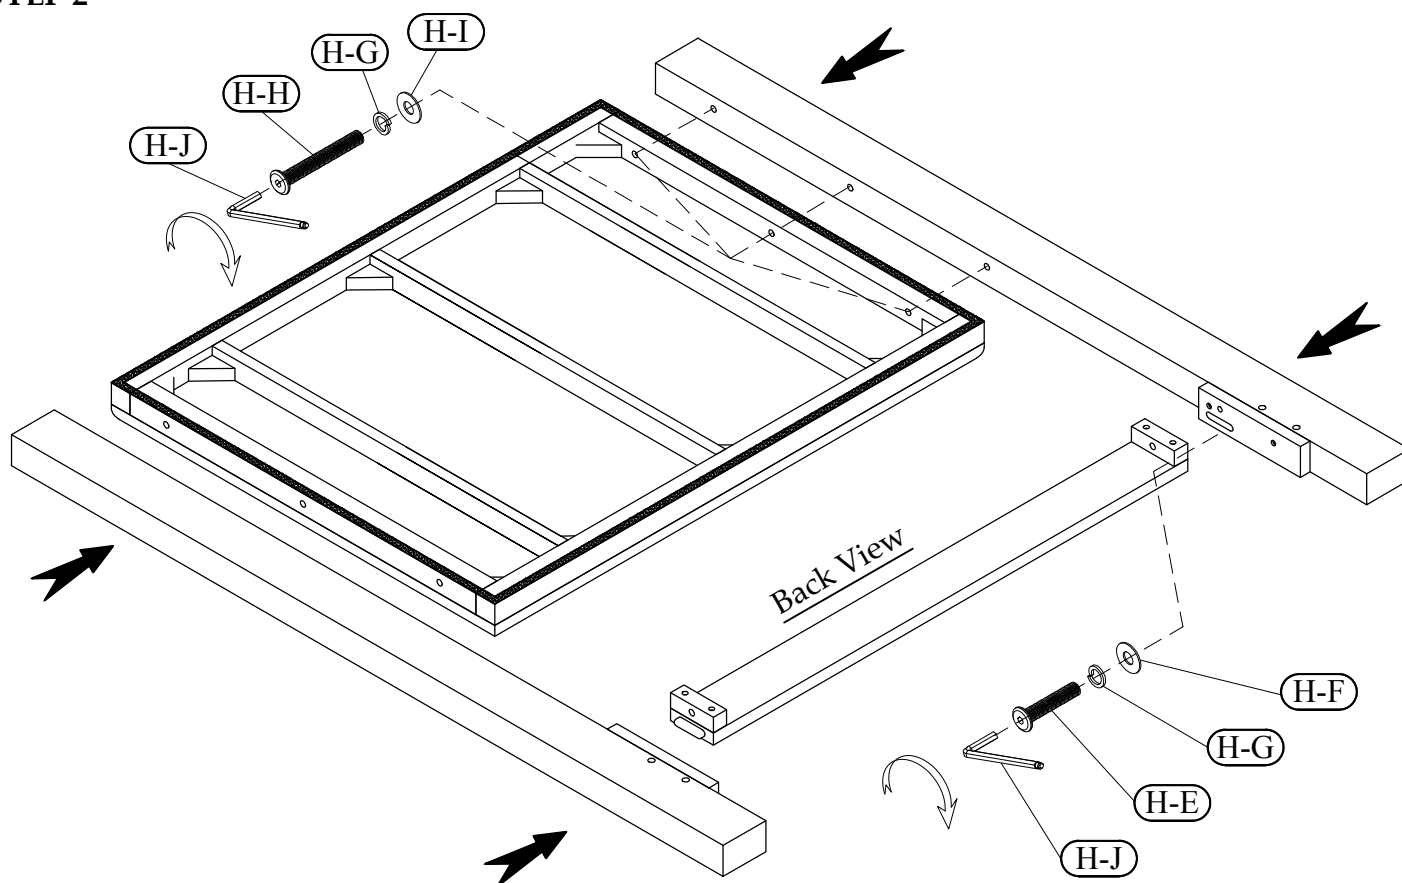


**STEP 3**

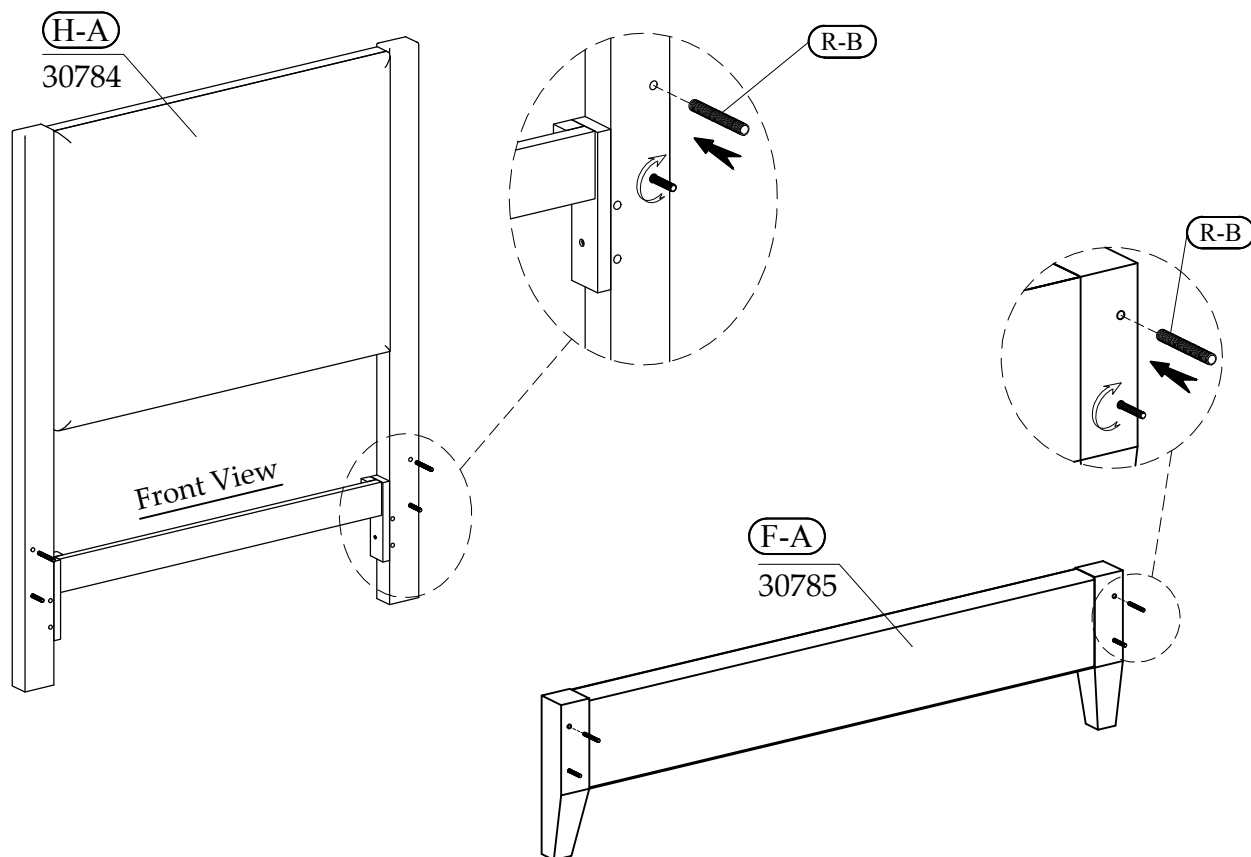


**STEP 4**

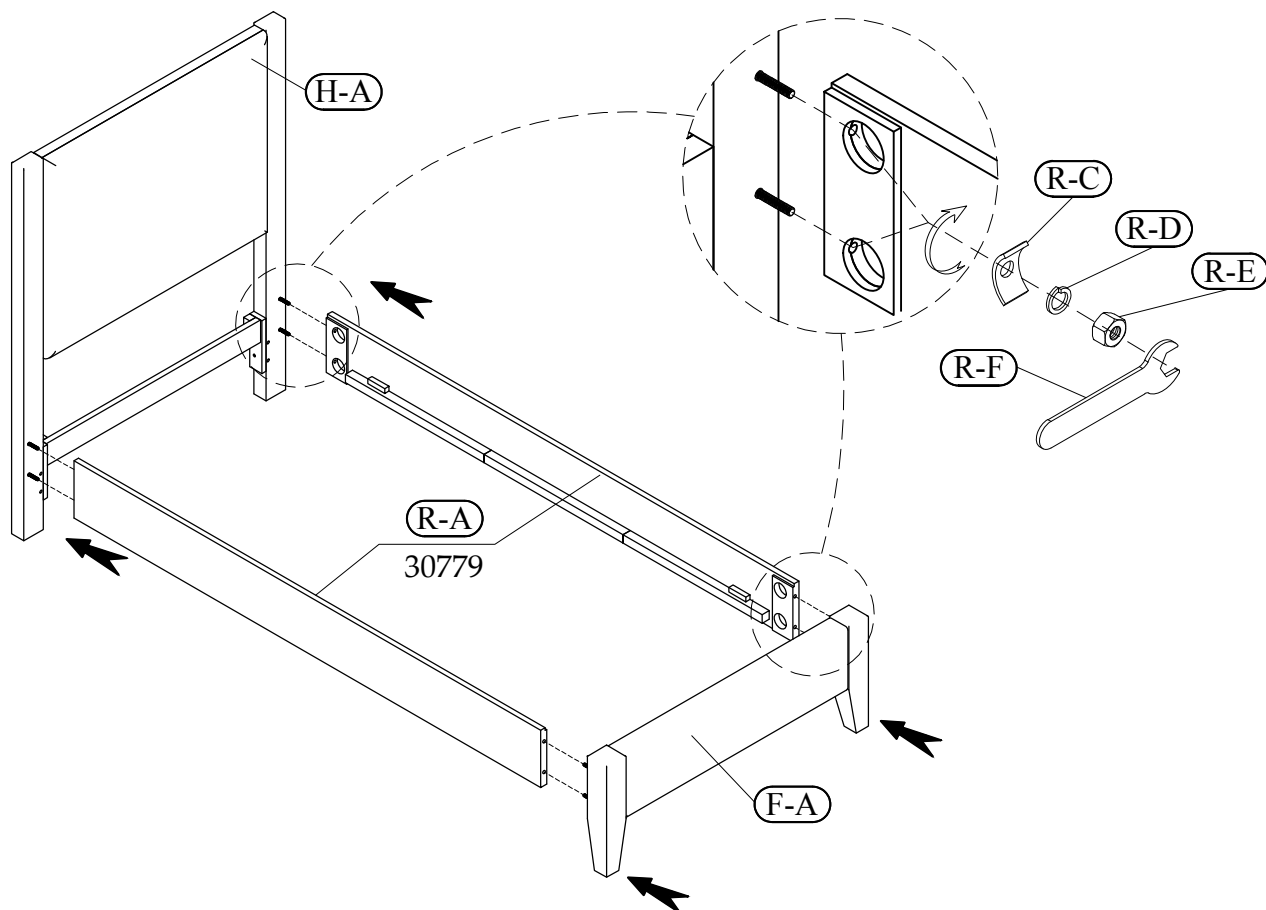

**STEP 5**

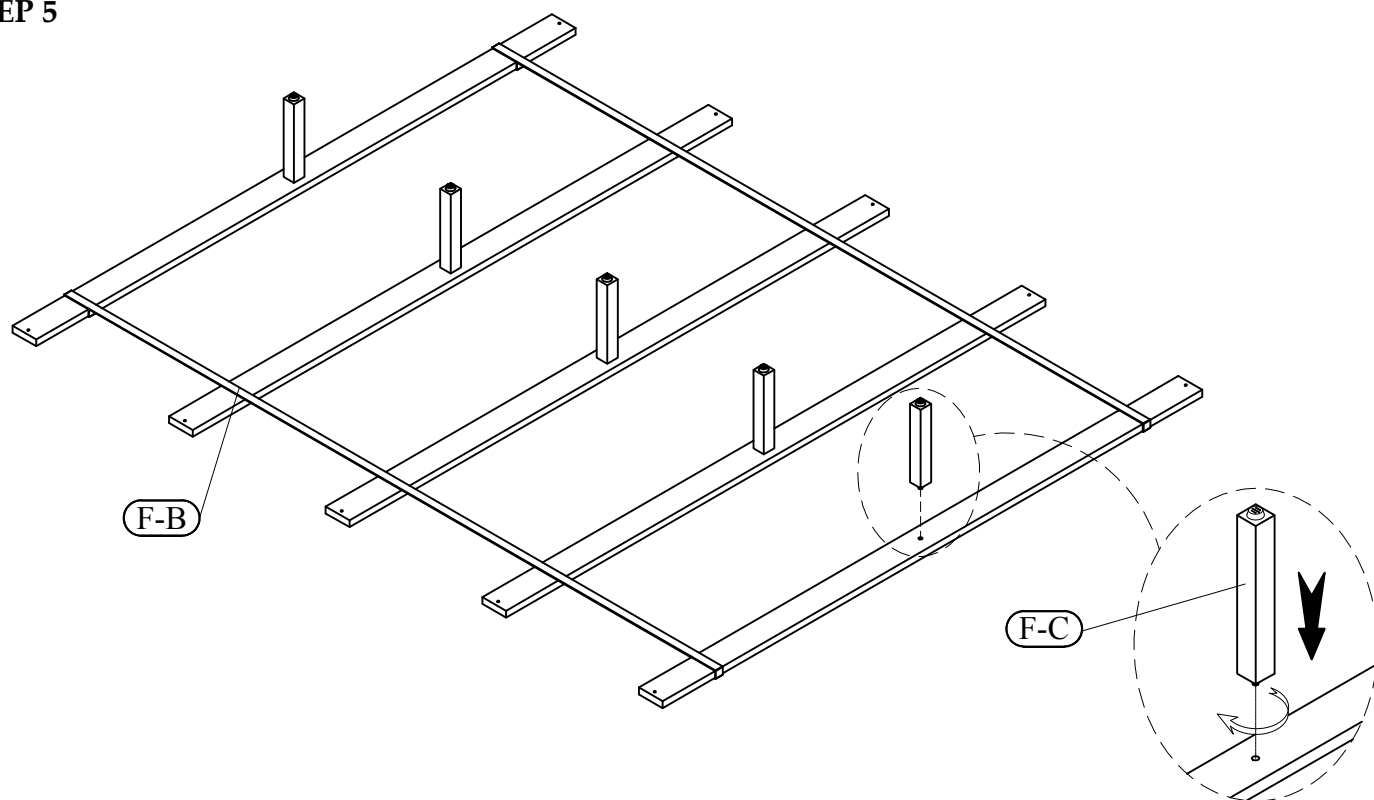


**STEP 6**

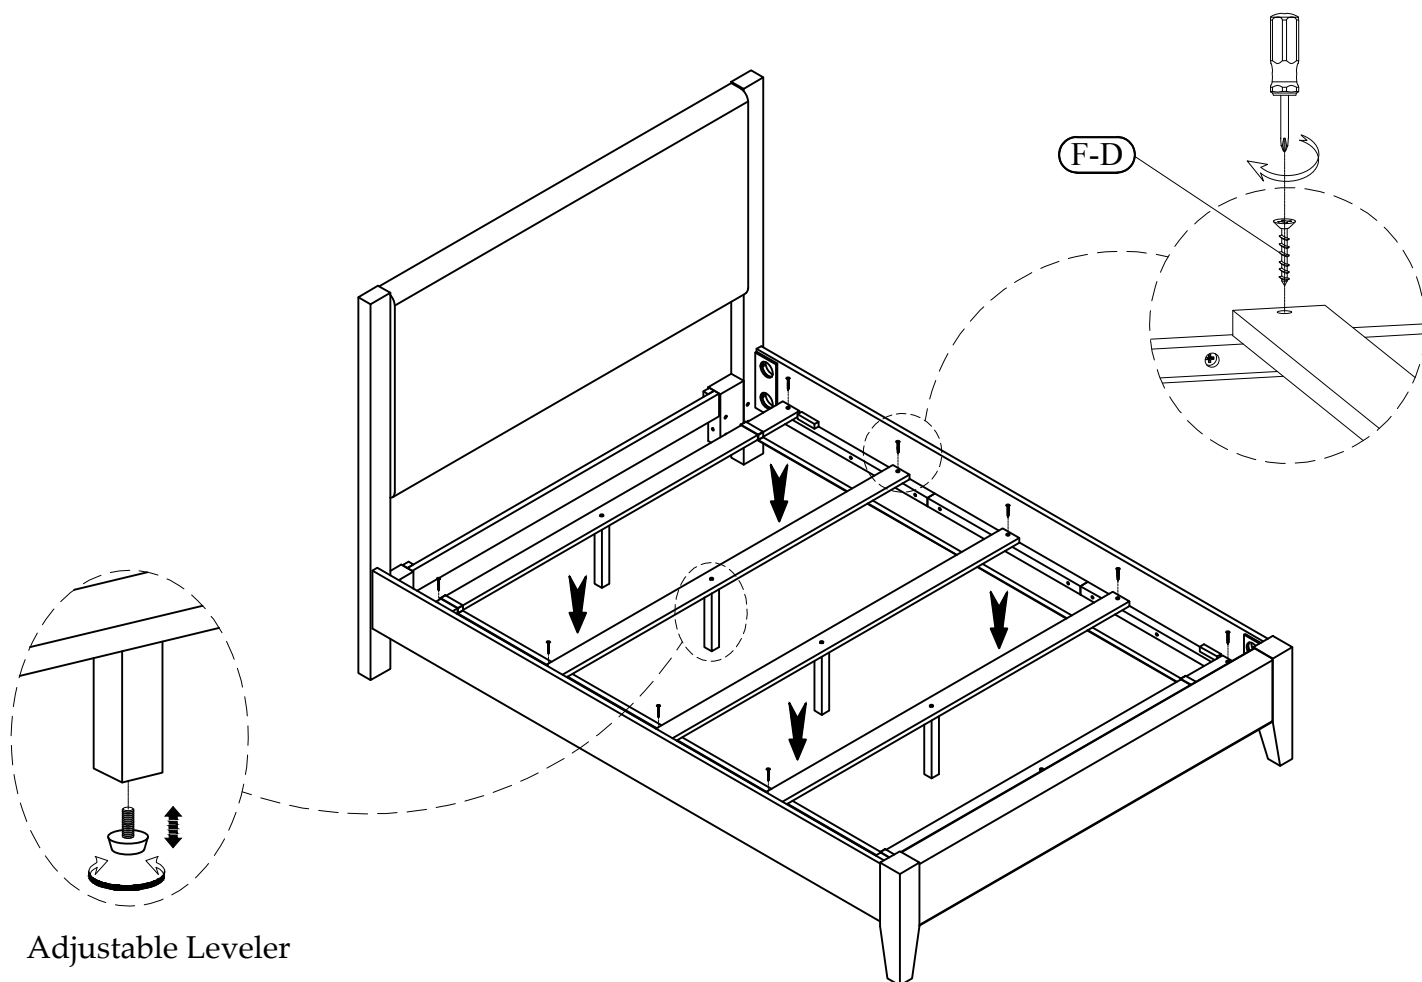

4/6 Full Bed

30784 - 4/6 Upholstered Headboard

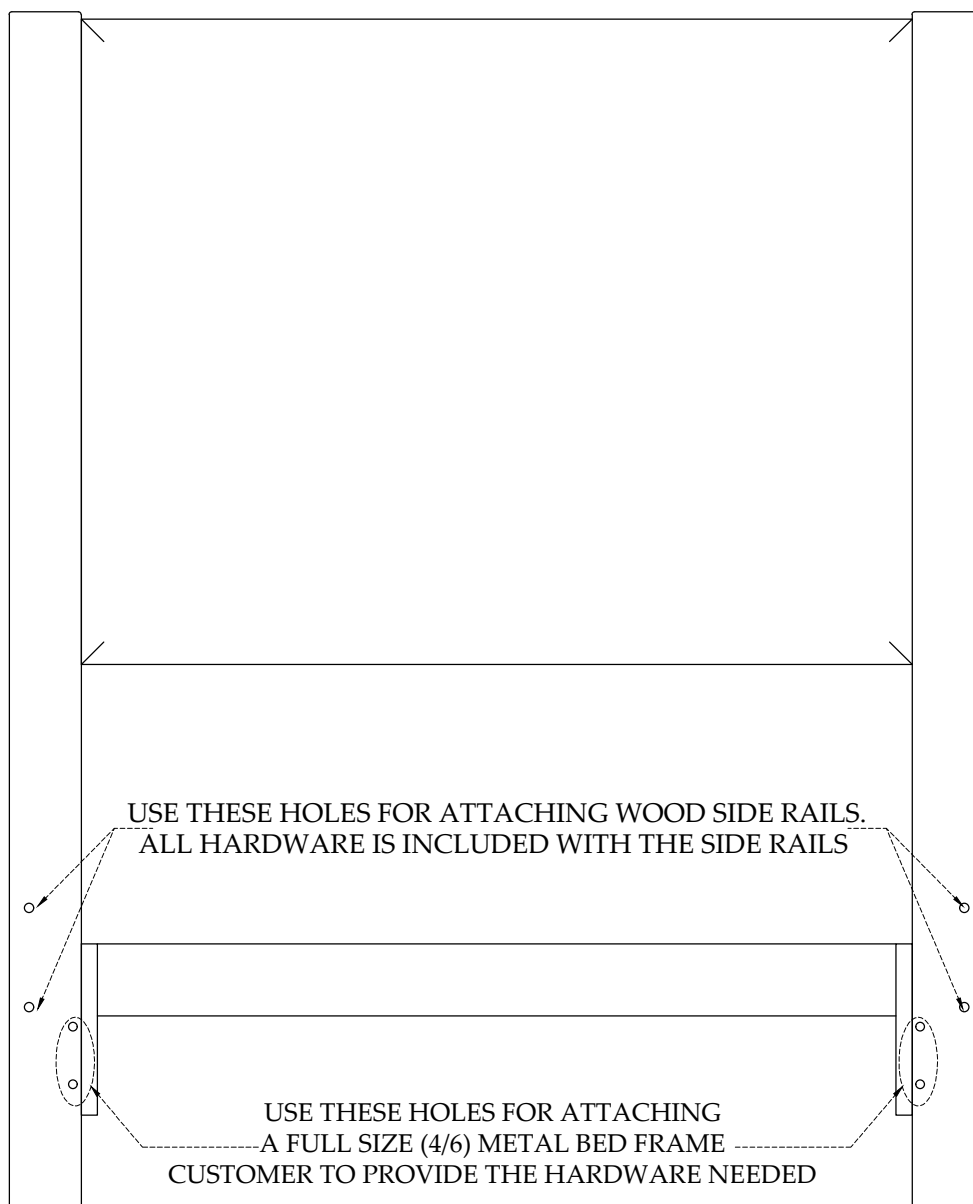

THE HEADBOARD MAY BE USED ALONE WITH  
A FULL SIZE METAL BED FRAME