Riverside

email: info@riverside-furniture.com

Mix-n-Match Chair Dining Room Assembly Instructions

(\D)

8 pcs.

Allen Head Bolt

Ø5/16"-18 x 2"


1 pc.

(E)

Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

Components and Hardware List

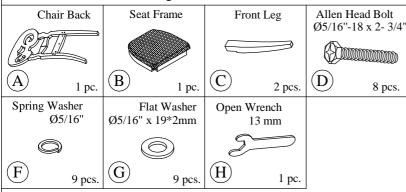


Made in Viet Nam



#36352/ 36552/ 36652 Scroll Uph Side Chair

STEP 1:

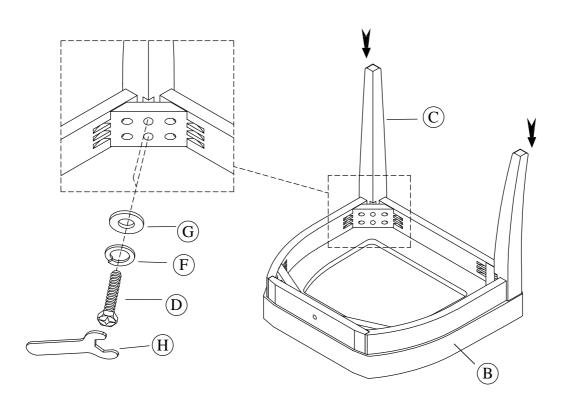

Riverside

email: <u>info@riverside-furniture.com</u>

Mix-n-Match Chair Dining Room Assembly Instructions

Made in Viet Nam

36352/ 36552/ 36652 Scroll Uph Side Chair

