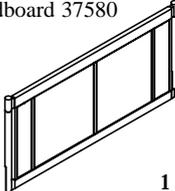
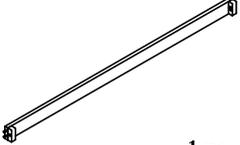







Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.



Hardware and Parts packed with the Headboard

 Panel Headboard 37580 (H-A) 1 pc.	 Headboard Post (Left) (H-B) 1 pc.	 Headboard Post (Right) (H-C) 1 pc.	 Headboard Stretcher (H-D) 1 pc.	
 $\phi 5/16$ "-18 x 2" Allen Head Bolt (H-E) 6 pcs.	 $\phi 5/16$ "-18 x 1-3/4" Allen Head Bolt (H-F) 2 pcs.	 $\phi 5/16$ " Spring Washer (H-G) 8 pcs.	 $\phi 5/16$ " x 19*2mm Flat Washer (H-H) 8 pcs.	 5mm Allen Key (H-I) 1 pc.

Hardware and Parts packed with the Footboard

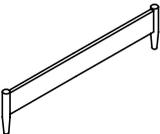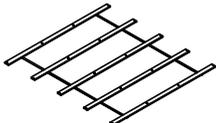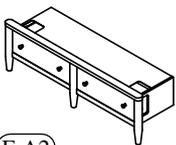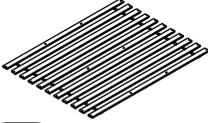
 Panel Footboard 37581 (F-A1) 1 pc.	 Wood Slat 77-1/2" Long (F-B) 1 Set.	 Support Leg (D) 9-1/4" x (W)1- 1/4"(H) 1- 1/4" (F-C) 10 pcs.	 #8 x 1" Wood Screw (F-D) 10 pcs.	Screw Driver not included 	
 Storage Footboard 37583 (F-A2) 1 pc.	 Storage Support leg (D) 9-3/4" x (W)1- 1/2"(H) 1-1/2" (F-B) 2 pcs.	 Wood Slat 77-1/2" Long (F-C) 1 Set.	 Center Slat Support Rail (D) 59-1/2" x (W)2- 3/4"(H) 3/4" (F-D) 2 pcs.	 Slat Support Leg (D) 16-3/4" x (W)1- 1/4"(H) 1- 1/4" (F-E) 6 pcs.	 $\phi 5/16$ "-18 x 1- 1/2" Allen Head Bolt (F-F) 4 pcs.
 $\phi 5/16$ " Spring Washer (F-G) 4 pcs.	 $\phi 5/16$ " x 19*2mm Flat Washer (F-H) 4 pcs.	 5mm Allen Key (F-I) 1 pc.	 #8 x 1" Wood Screw (F-J) 22 pcs.	Screw Driver not included 	

Hardware and Parts packed with the Bed Rail

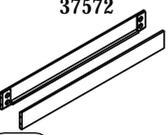
 Panel Bed Rails 37572 (R-A1) 2 pcs.	 $\phi 5/16$ -18 x 3-1/2" All-Thread Bolt (R-B) 8 pcs.	 $\phi 5/16$ " Curved Washer (R-C) 8 pcs.	 $\phi 5/16$ " x 16*2mm Flat Washer (R-D) 8 pcs.	 $\phi 5/16$ " Spring Washer (R-E) 8 pcs.	 $\phi 5/16$ x L17 Nut (R-F) 8 pcs.	 Open Wrench 12mm (R-G) 1 pc.
 Storage Bed Rails (Left) 37576 (R-A2) 1 pc.	 Storage Bed Rails (Right) 37576 (R-A3) 1 pc.	 $\phi 5/16$ -18 x 3-1/2" All-Thread Bolt (R-B) 8 pcs.	 $\phi 5/16$ " Curved Washer (R-C) 8 pcs.	 $\phi 5/16$ " x 16*2mm Flat Washer (R-D) 8 pcs.	 $\phi 5/16$ " Spring Washer (R-E) 8 pcs.	 $\phi 5/16$ x L17 Nut (R-F) 8 pcs.
 Open Wrench 12mm (R-G) 1 pc.	<p>6/6 King Bed 37580 --6/6 Woven Headboard 37581 --6/6 Panel Footboard 37572 --5/0-6/6 Panel Siderails</p>		<p>6/6 King Storage Bed 37580 --6/6 Panel Headboard 37583 --6/6 Storage Footboard 37576 --5/0-6/6 Storage Bed Rails</p>			

King Bed
37580 -- 6/6 Woven Headboard

STEP 1

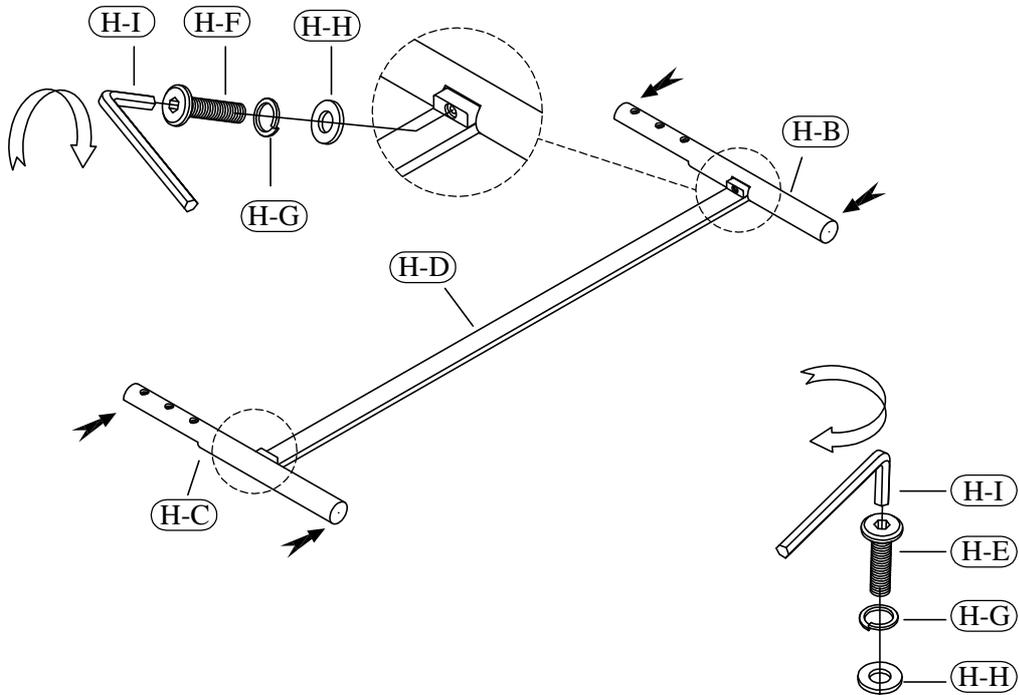

STEP 2

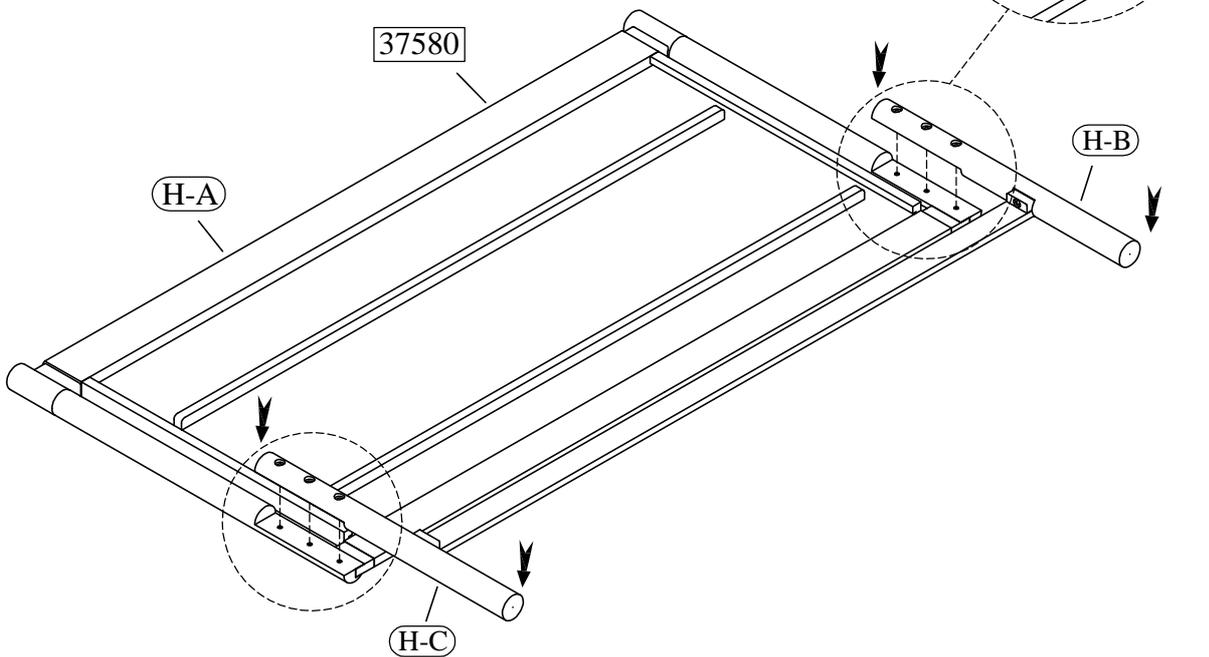


King Bed


37580 --6/6 Woven **Headboard**

37581 --6/6 Panel **Footboard**


STEP 3

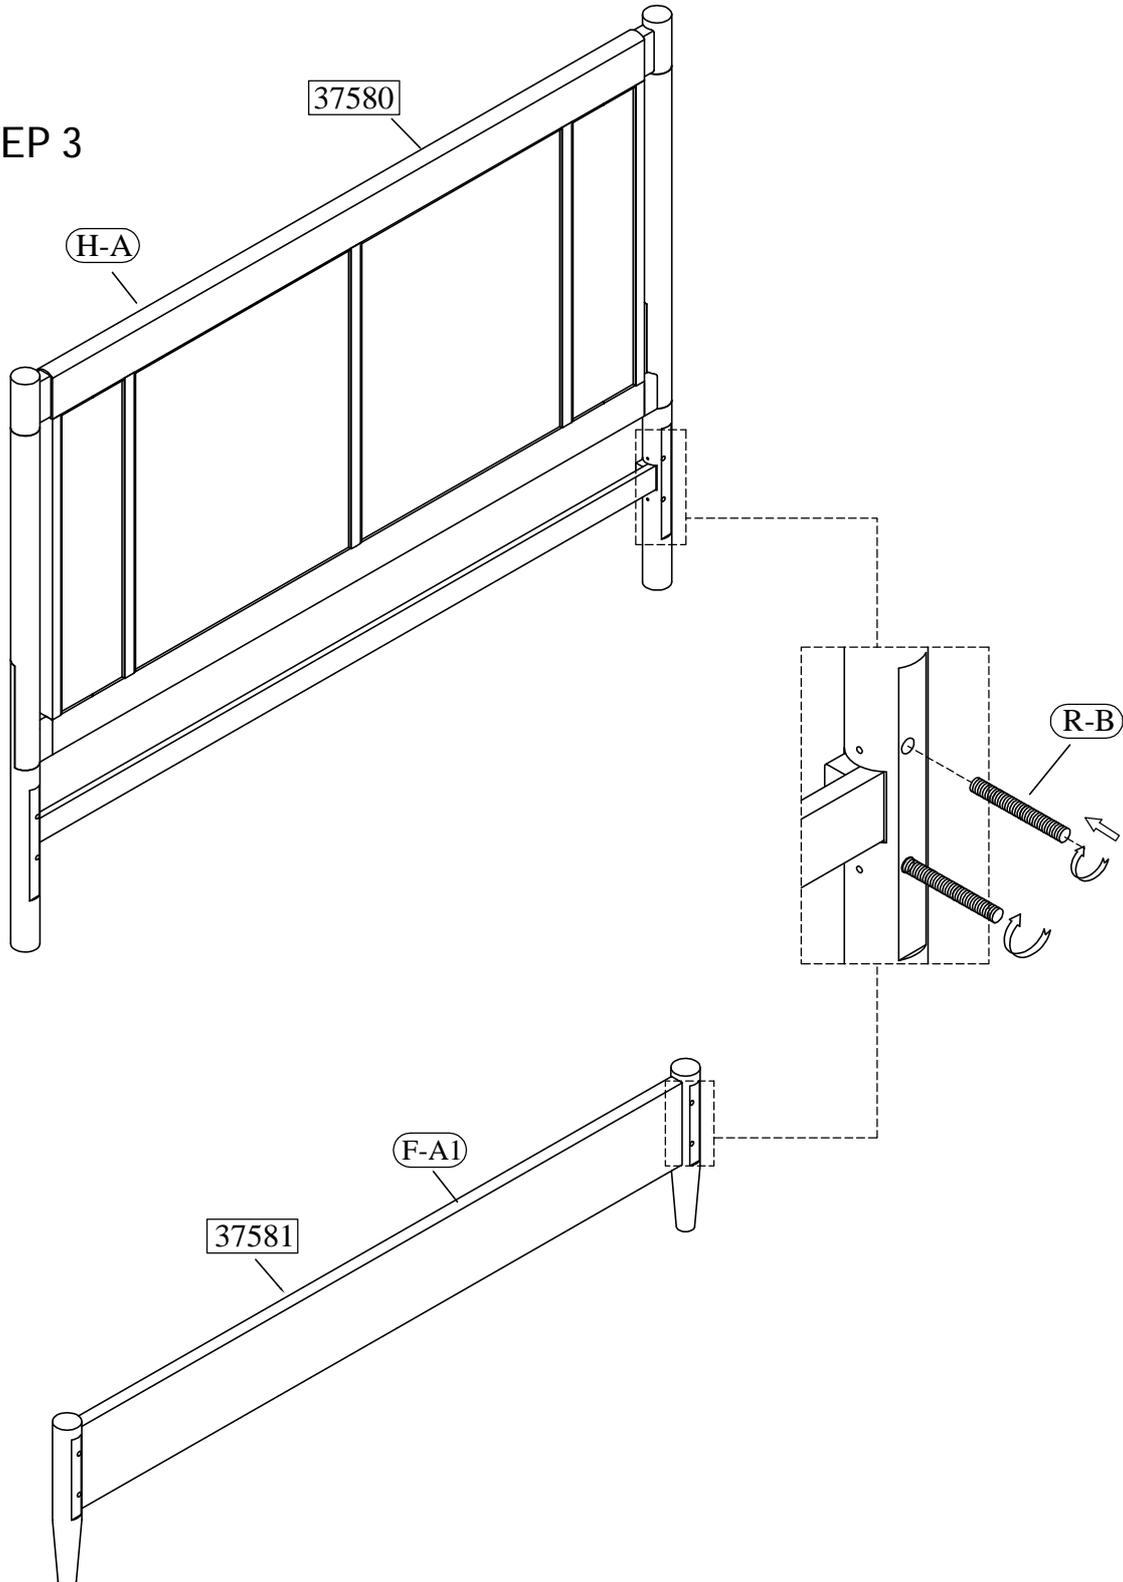

STEP 4

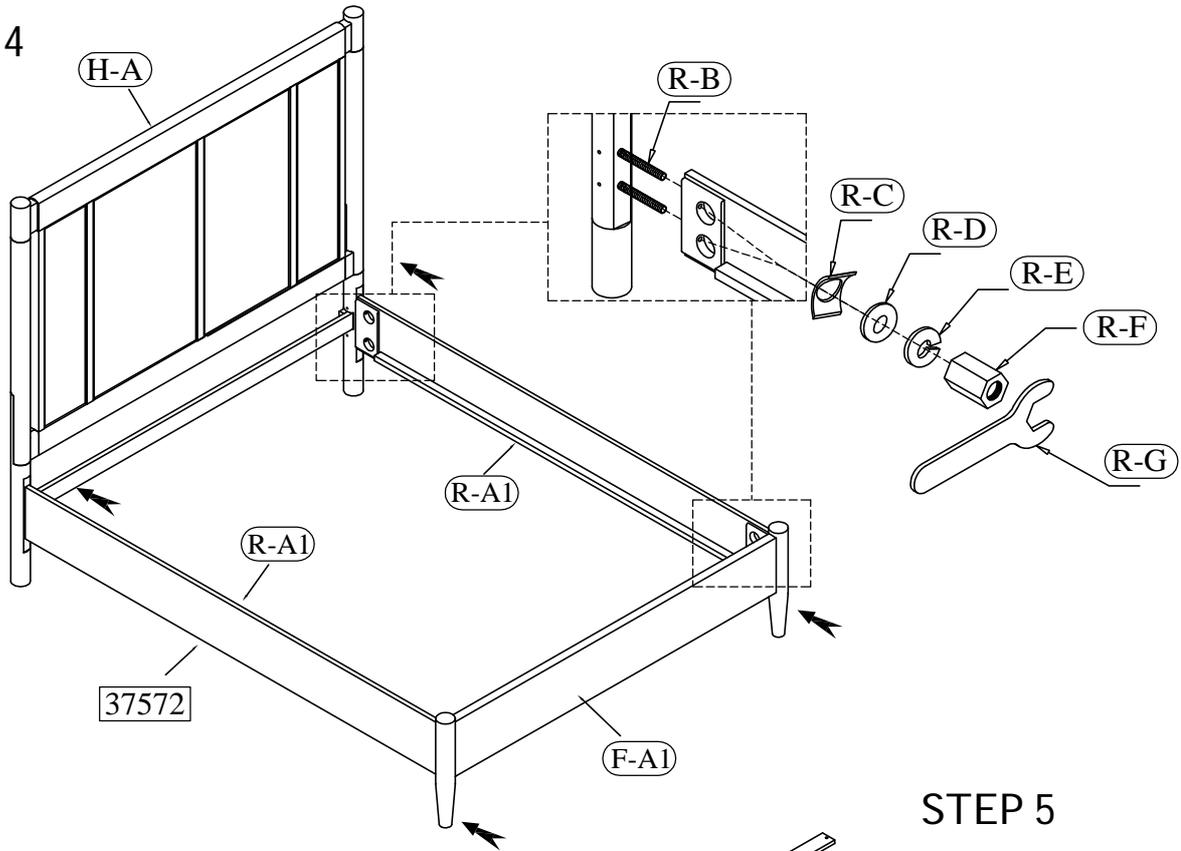

STEP 5

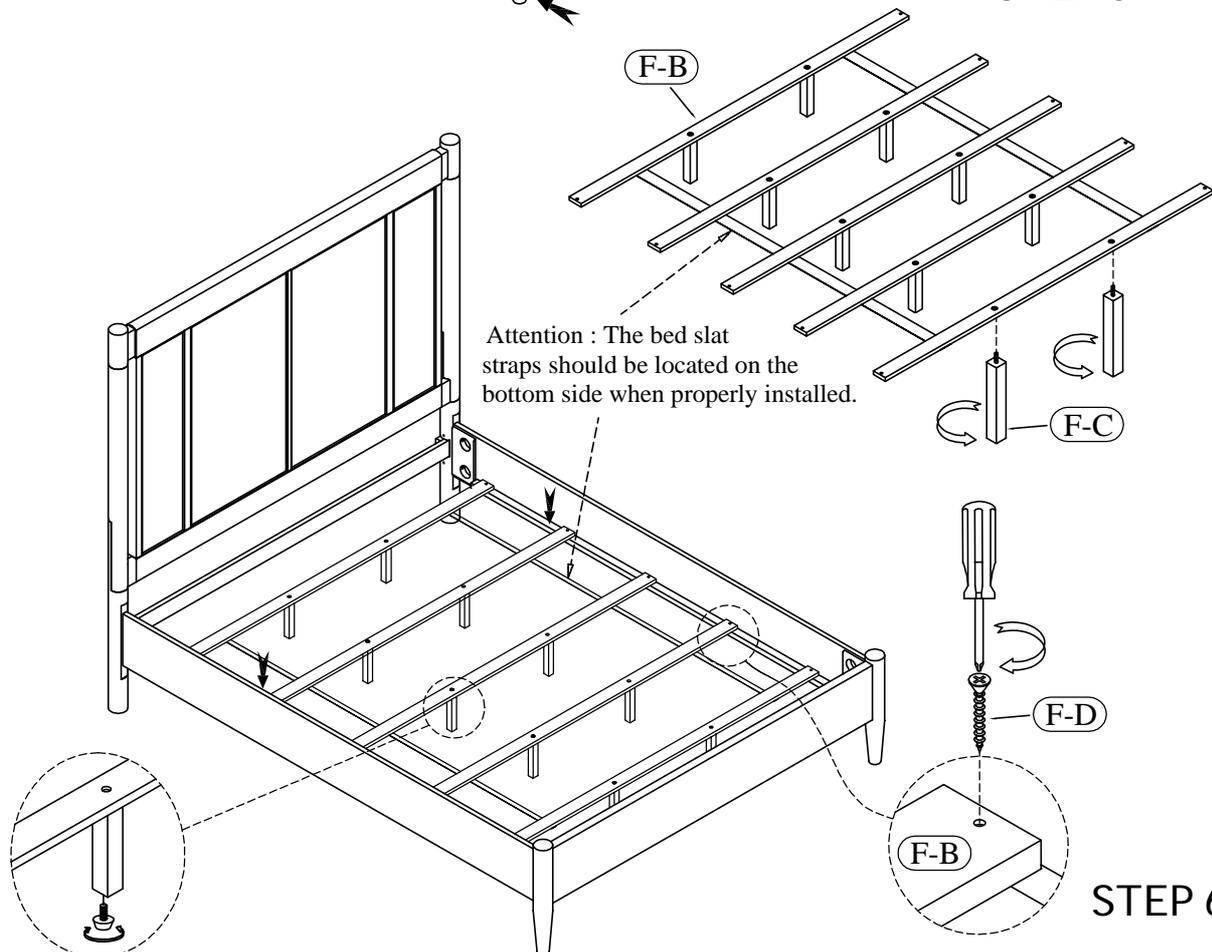

STEP 6



Adjustable Level

King Bed

37580 --6/6 Panel **Headboard**

37583 --6/6 Storage **Footboard**

STEP 3

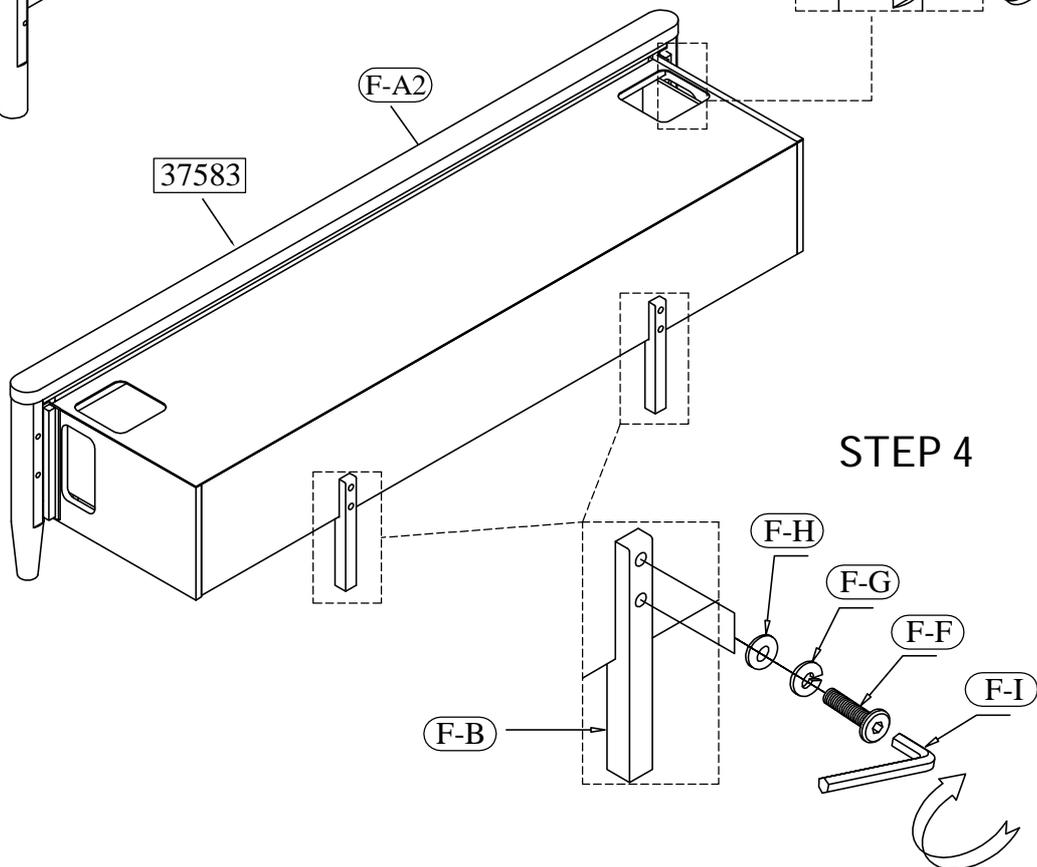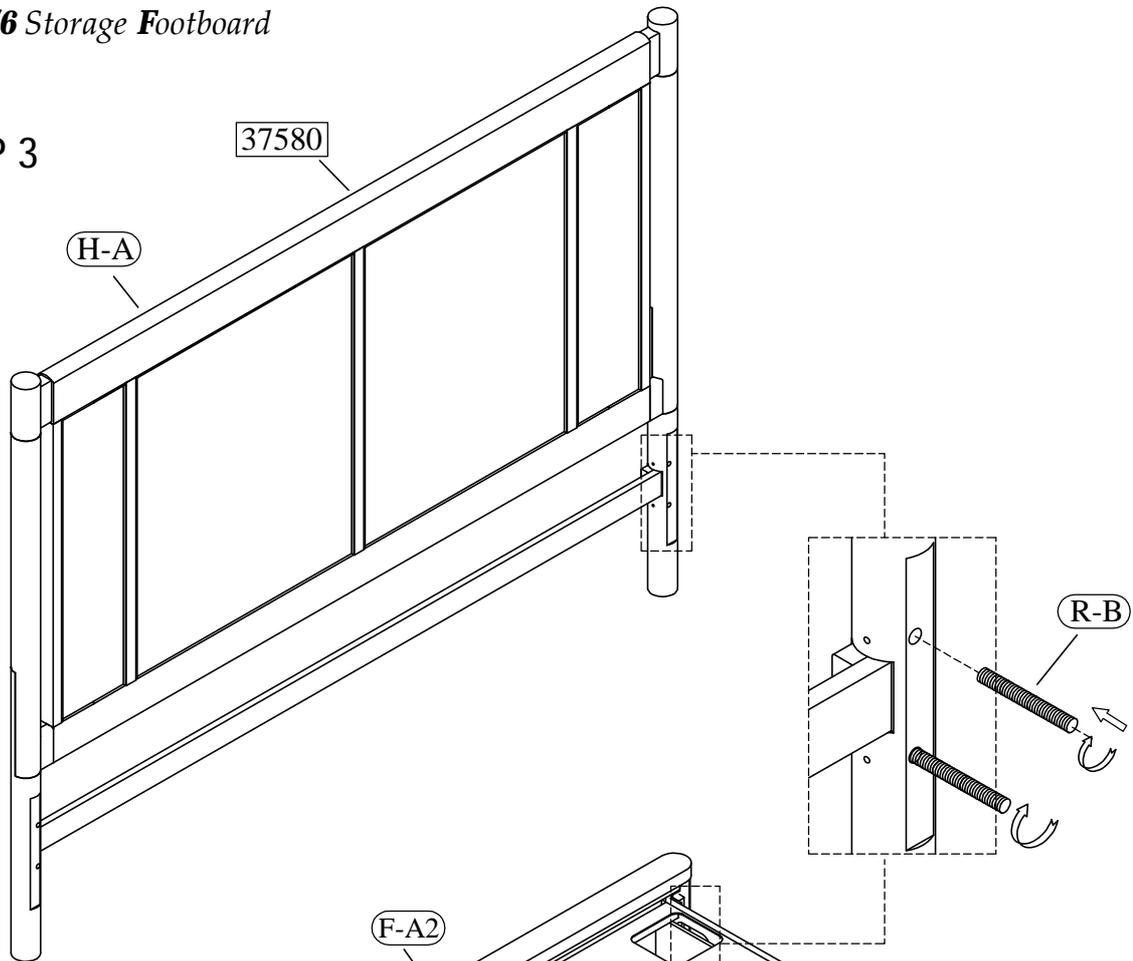

STEP 4

King Storage Bed


37580 --6/6 Panel **Headboard**

37583 --6/6 Storage **Footboard**


37576 --5/0-6/6 Storage **Bed Rails**

STEP 5


Remove both drawers

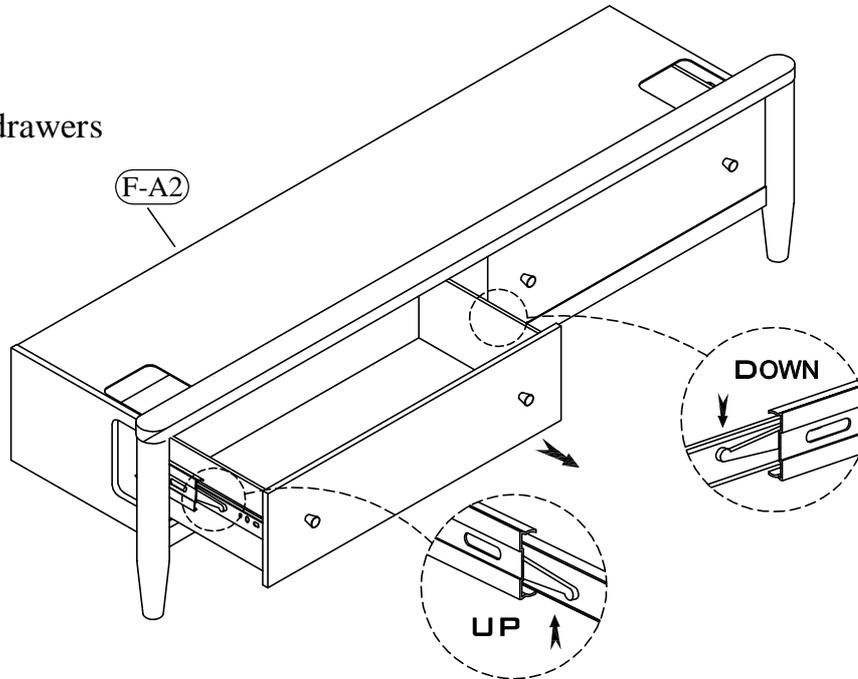


STEP 6

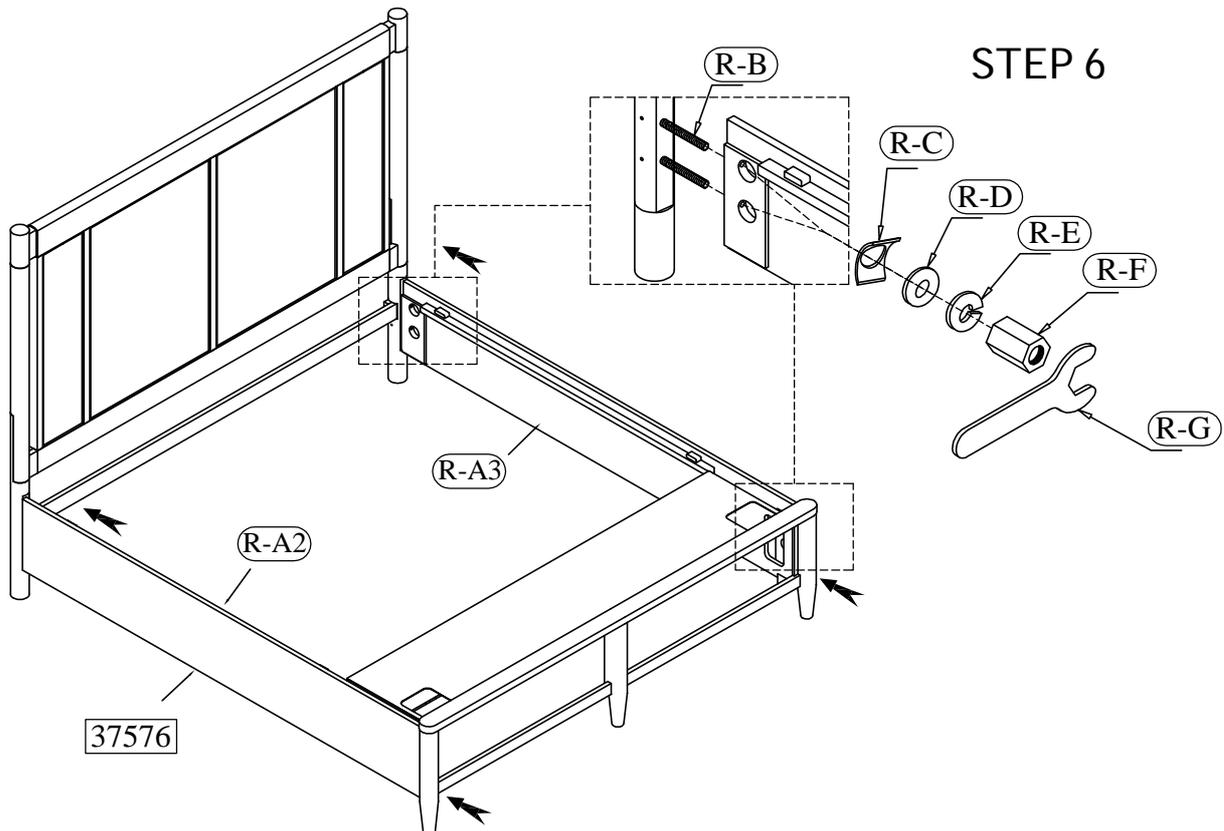


STEP 7

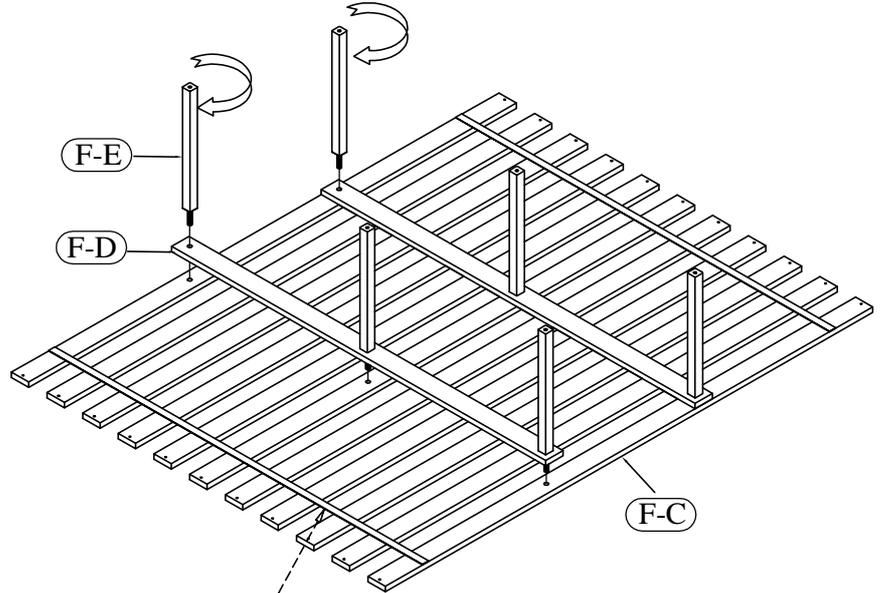


Attention : The bed slat straps should be located on the bottom side when properly installed.

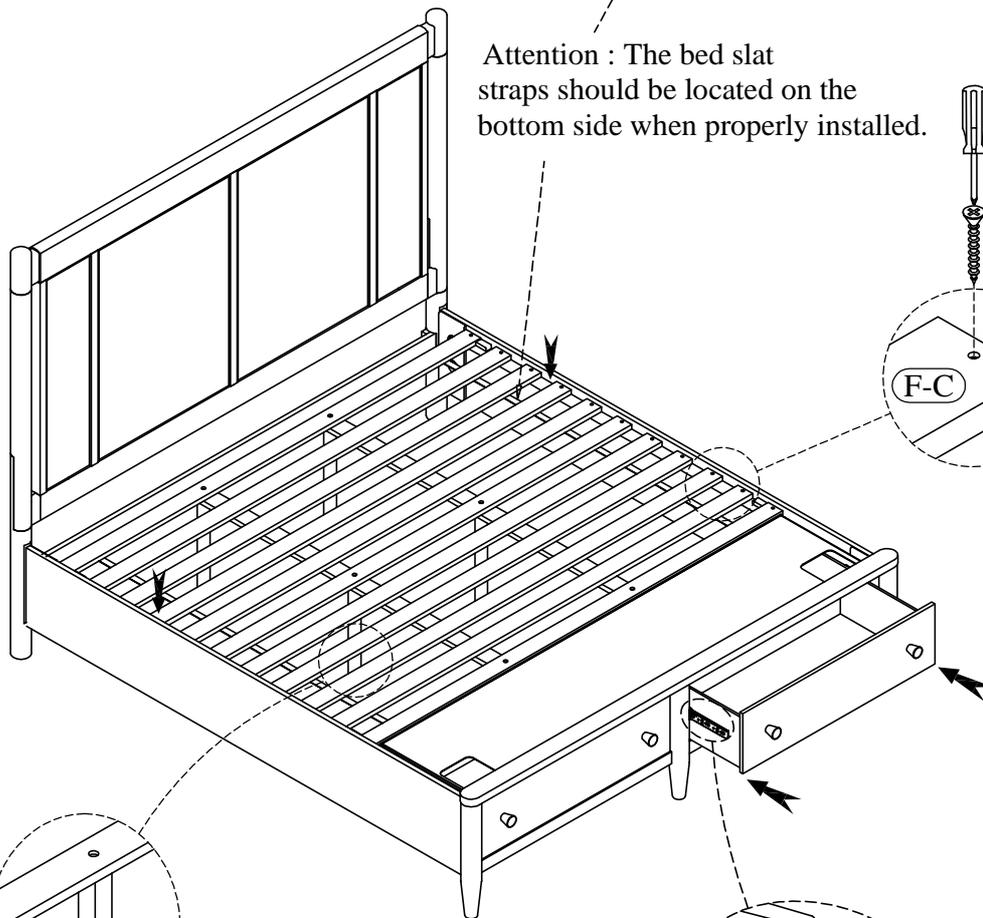

STEP 8

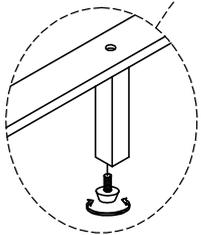

Adjustable Leveler

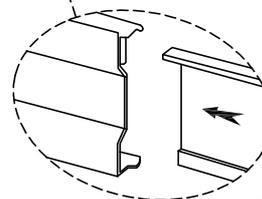

STEP 9

Attach both drawers

King Bed
37580 -- 6/6 Panel Headboard

