


### Warning :

- Be sure to check all pacQueen material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

### Compnents packed with the Headboard

Queen Uph Headboard - 51870

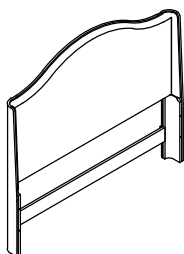


(H-A)

1 pc

### Hardware and Parts packed with the Footboard


Queen Panel Footboard - 51871

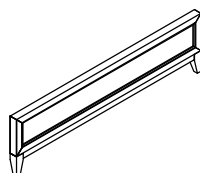

(F-A)

1 pc

Wood Slat (63" long)

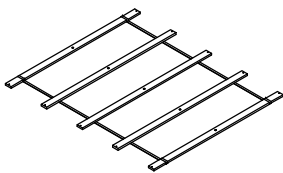

(F-B)

1 set


Support leg (8" x 1-1/4" x 1-1/4")



(F-C)

5 pcs


Wood Screw Ø4 x 25mm



(F-D)


10 pcs

Tool Required (not provided)  
Phillips Screwdriver



### Hardware and Parts packed with the Bed Rails

Bed Rails - 51872

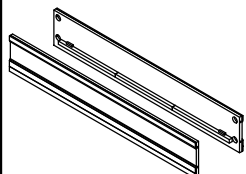

(R-A)

2 pcs

Thread Bolt M8-32 x 70mm



(R-B)

8 pcs

Arc Washer 14 x 26mm



(R-C)

8 pcs

Lock Washer Ø10 x Ø15mm



(R-D)

8 pcs

Hex Nut M8-32 x 7mm



(R-E)

8 pcs

Open Wrench 13 mm



(R-F)


1 pc

### 5/0 Queen Bed


51870 - 5/0 Uph Headboard

51871 - 5/0 Panel Footboard


51872 - 5/0-6/6 Bed Rails

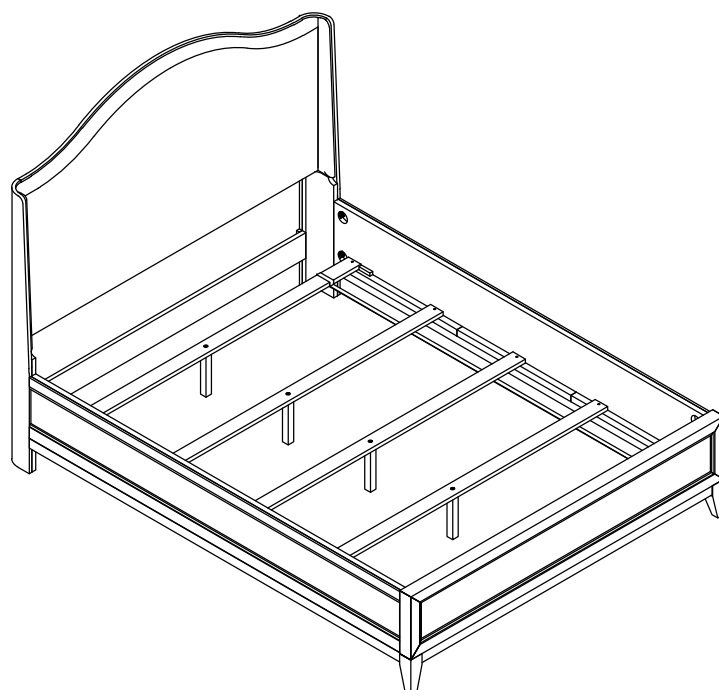


**STEP 1**

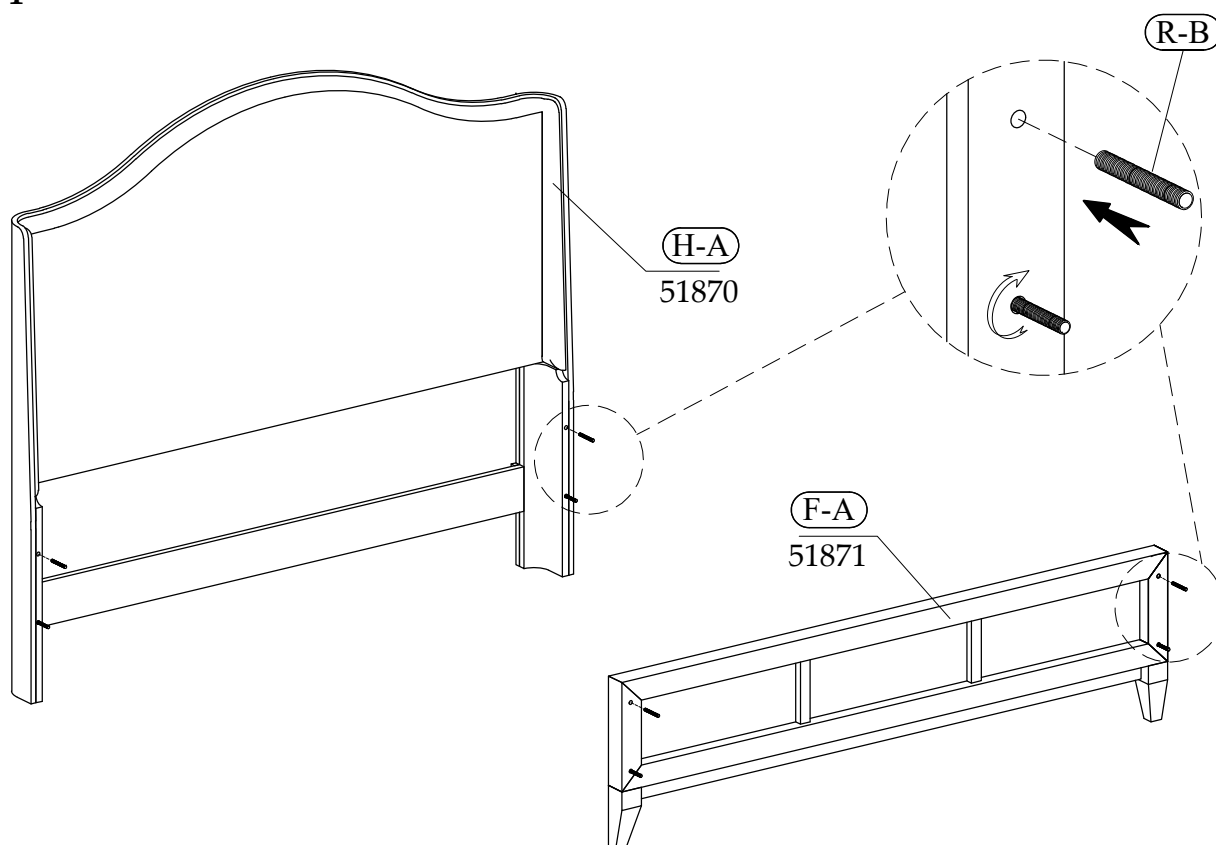

**STEP 2**

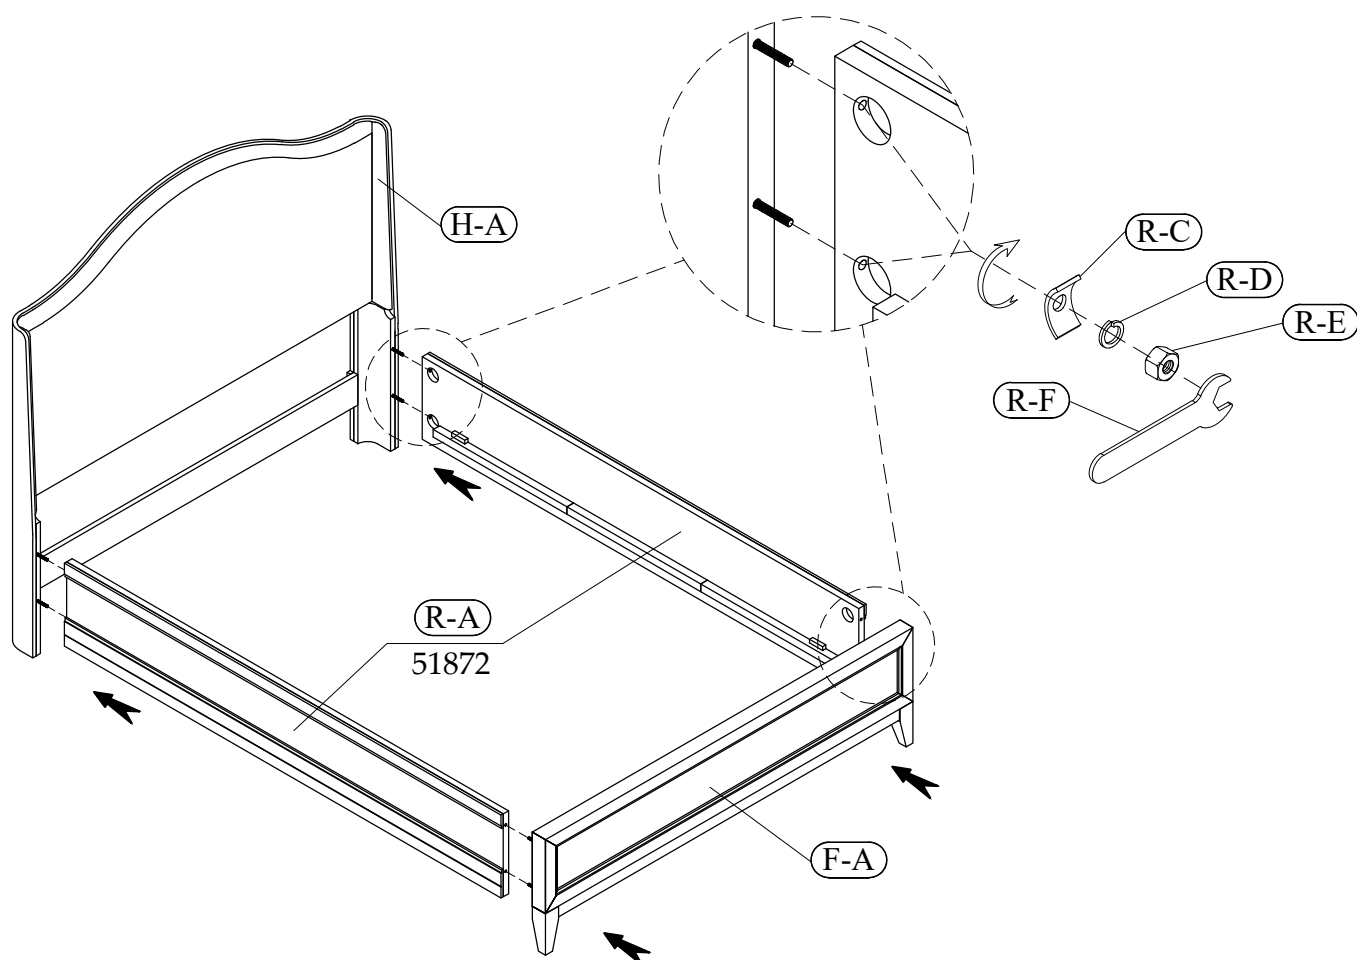

**STEP 3**

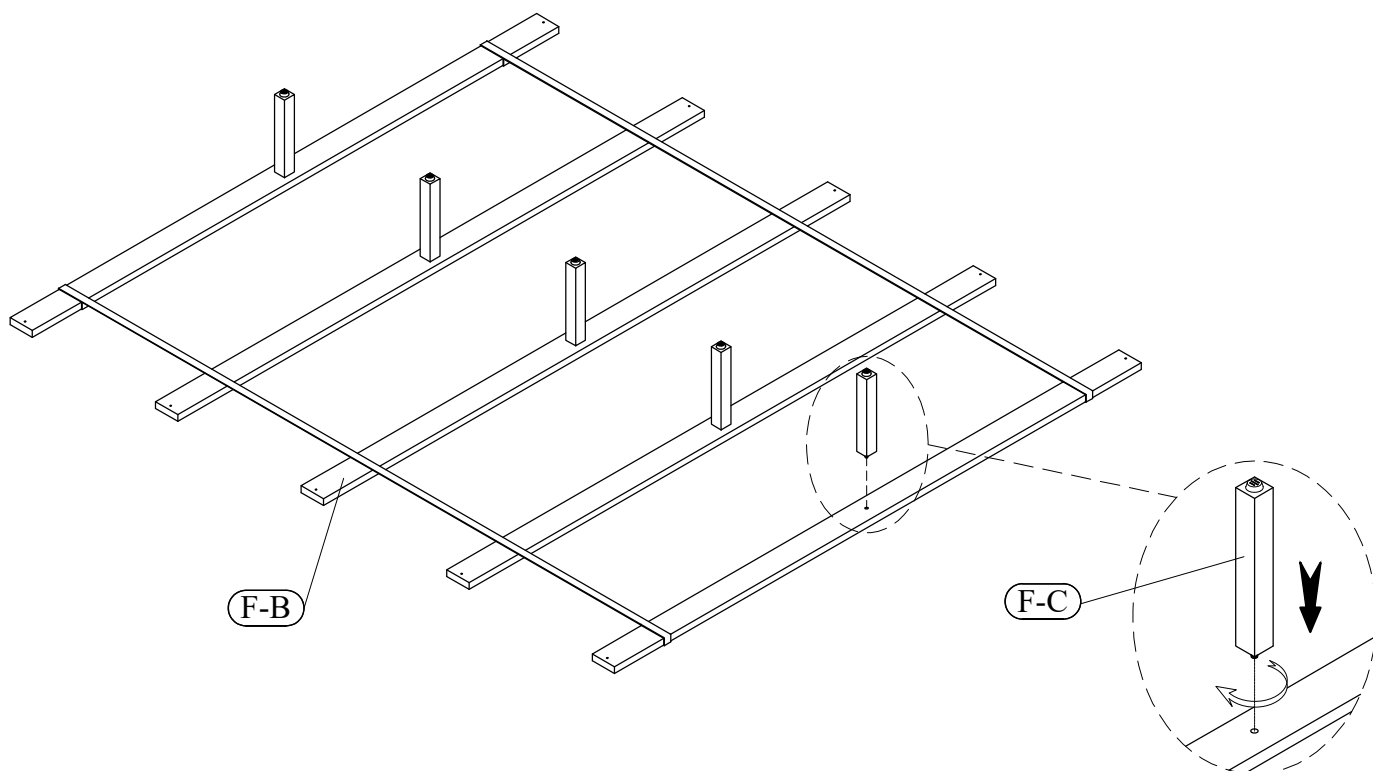

**STEP 4**

