






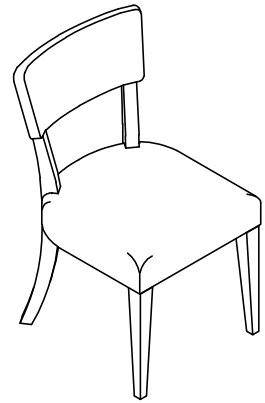


Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

Components and Hardware List


<p>Chair Back</p>  <p>A 1 pc.</p>	<p>Seat Frame</p>  <p>B 1 pc.</p>	<p>Front Leg</p>  <p>C 2 pcs.</p>	<p>Flat Washer Ø5/16" x Ø19*2mm</p>  <p>D 8 pcs.</p>	<p>Spring Washer Ø5/16" x Ø13</p>  <p>E 8 pcs.</p>
<p>Allen Head Bolt Ø5/16"-18 x 2"</p>  <p>F 8 pcs.</p>	<p>Allen Key 5mm</p>  <p>G 1 pc.</p>			




79457
Curve Back Uph Side Chair 2in

Step 1


Remove black fabric cover

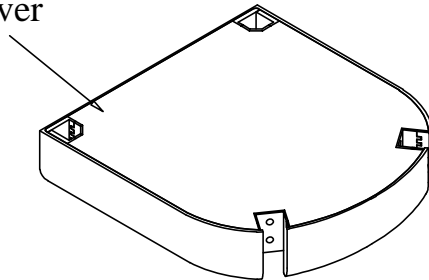


Step 2

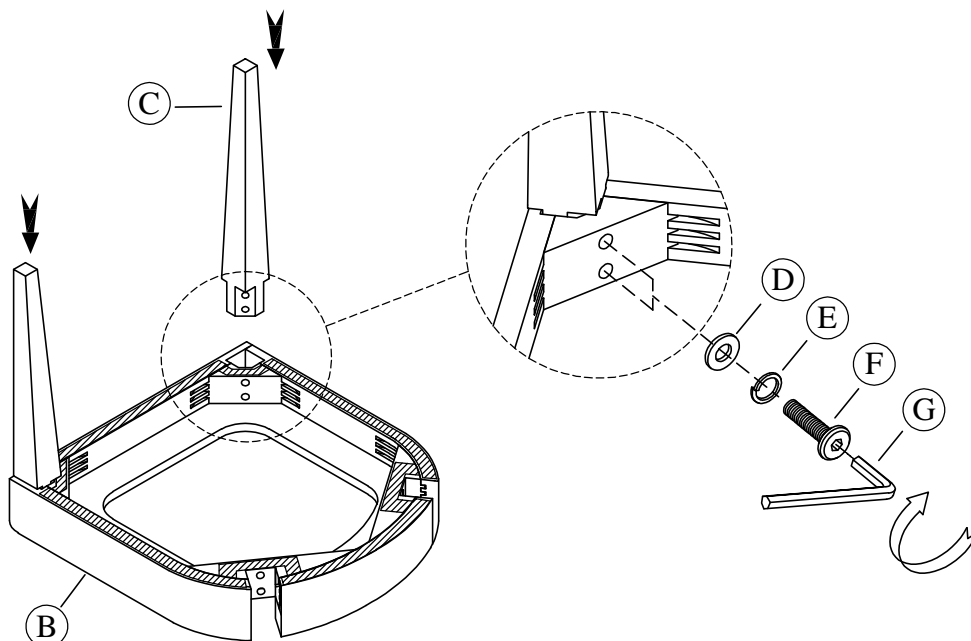


Step 3: Align both notches of seat panel with back assembly legs, push seat panel notches into legs, then slide the seat panel toward the top until bolt holes align.

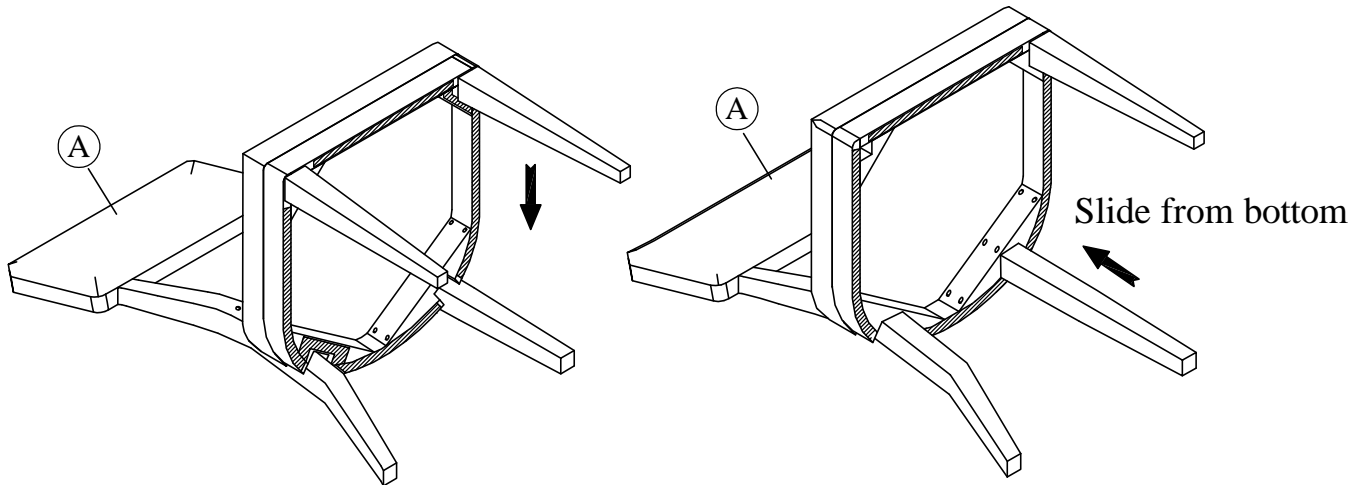

Step 4

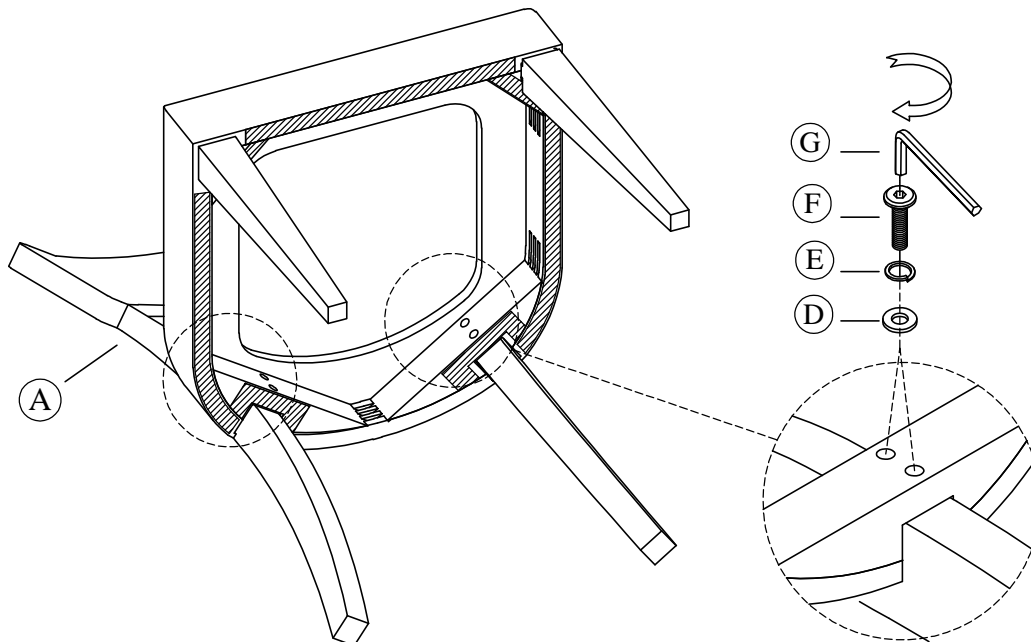

Step 5: Re-attach black fabric cover

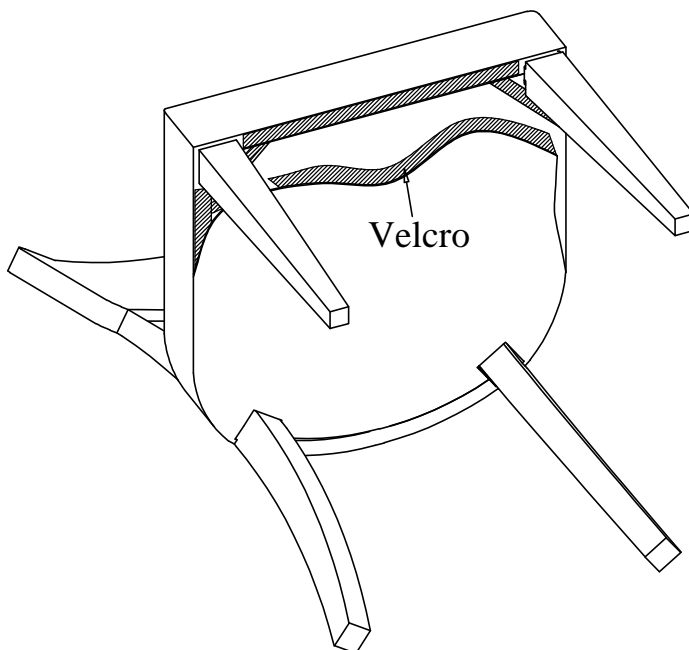

Complete

