

Pasadena Bedroom Assembly Instructions Page 1 of 3

Made in Viet Nam

4/6-5/0 Upholstered Queen Bed

Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

blanket or carpet. Components packed with the #81074 Headboard Queen Upholstered Headboard 1 pc. Hardware and Parts packed with the Footboard Support Leg Wood Screw Queen Upholstered Footboard Screw Driver Wood Slat 63" Long Ø4 x 30mm 14-5/8" x 1-1/8" x 1-1/8" not included (F-B) (F-C) 10 pcs Hardware and Parts packed with the Bed Rails Arc Washer Spring Washer Upholstered SideRails - 81082 All-Thread Bolt Flat Washer Hex Nut Open Wrench 37x17mm Ø5/16'' x Ø13mm Ø5/16"-18 x 3-1/2' Ø5/16" x Ø16mm Ø5/16"x18mm 12 mm (R-A) (R-B) (R-C) (R-D) (R-E) (R-F) (R-G) 1 pc. 4/6-5/0 Upholstered Queen Bed 81074 -- 4/6 - 5/0 Upholstered Headboard 81075 -- 5/0 - Upholstered Footboard 81082 -- 5/0 - 6/6 Upholstered SideRails

Riverside


email: info@riverside-furniture.com


Pasadena Bedroom Assembly Instructions

Page 2 of 3

Made in Viet Nam

4/6-5/0 Upholstered Queen Bed

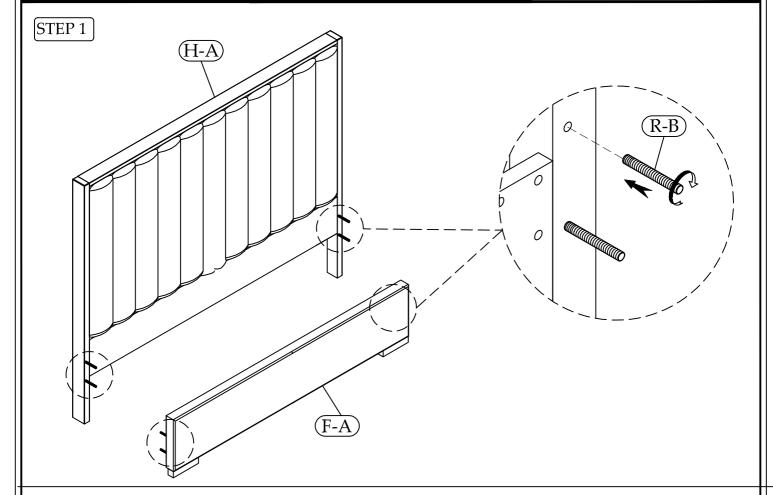

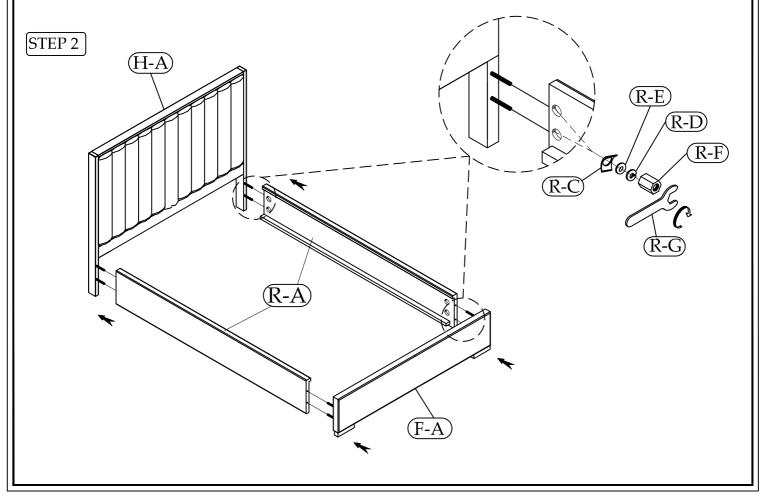

Riverside

email: info@riverside-furniture.com

Pasadena Bedroom Assembly Instructions

Page 3 of 3

Made in Viet Nam

4/6-5/0 Upholstered Queen Bed

