

email: info@riverside-furniture.com

Pasadena Bedroom Assembly Instructions

Page 1 of 3


Made in Viet Nam

6/0-6/6 Upholstered King Bed

Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Components packed with the #81084 Headboard King Upholstered Headboard 1 pc. Hardware and Parts packed with the Footboard Wood Screw Wood Slat Support Leg Screw Driver King Upholstered Footboard 79" Long Ø4 x 30mm 81085 14-5/8" x 1-1/8" x 1-1/8" not included (F-B) 1 pc. Hardware and Parts packed with the Bed Rails Arc Washer Upholstered SideRails - 81082 All-Thread Bolt Spring Washer Flat Washer Hex Nut Open Wrench 37x17mm Ø5/16'' x Ø13mm Ø5/16"-18 x 3-1/2' Ø5/16'' x Ø16mm Ø5/16"x18mm 12 mm (R-A) (R-C) (R-D) (R-E) (R-F) (R-G) 1 pc. 6/0-6/6 Upholstered King Bed 81084 -- 6/0 - 6/6 Upholstered Headboard 81085 -- 6/6 - Upholstered Footboard

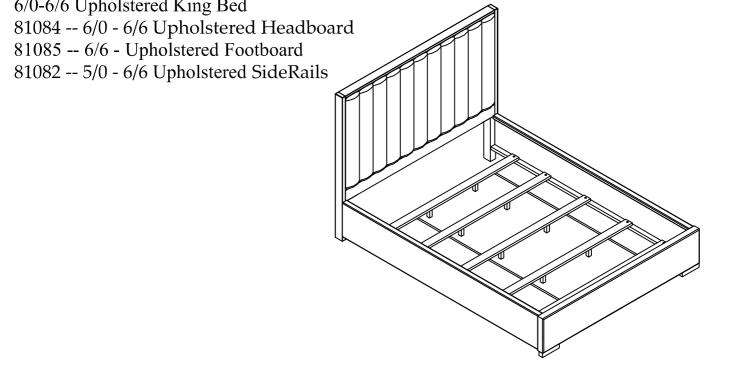

Riverside


email: info@riverside-furniture.com


Pasadena Bedroom Assembly Instructions

Page 2 of 3

Made in Viet Nam

4/6-5/0 Upholstered Queen Bed

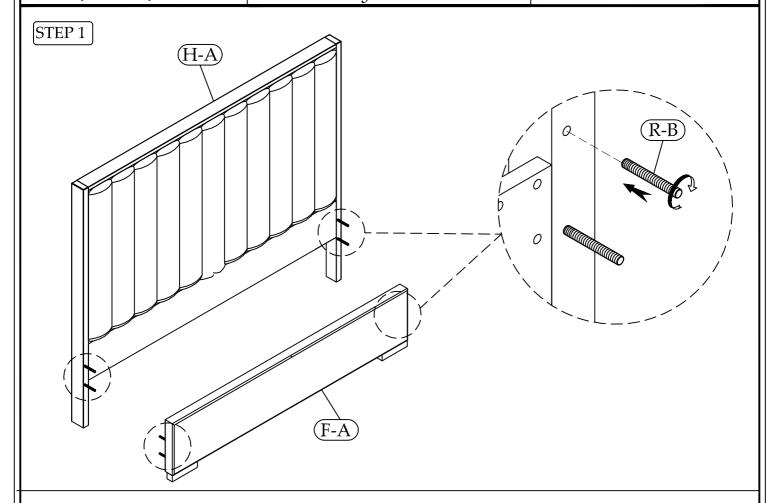

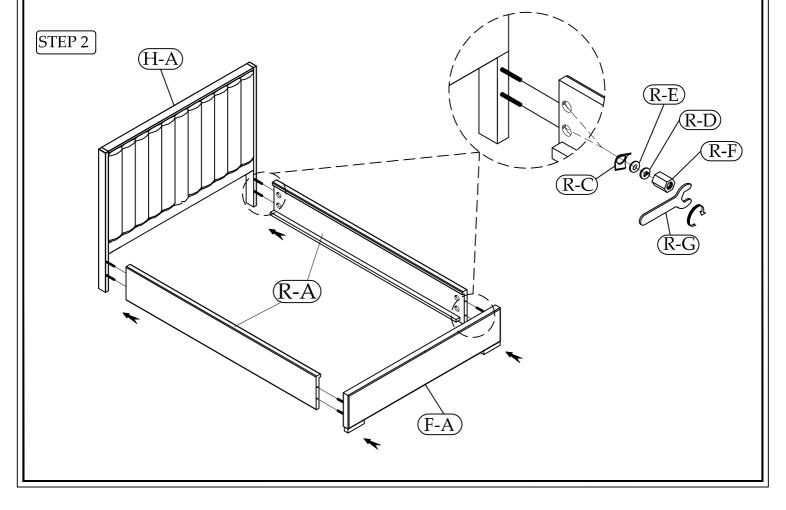

Riverside

email: info@riverside-furniture.com

Pasadena Bedroom Assembly Instructions

Page 3 of 3

Made in Viet Nam

6/0-6/6 Upholstered King Bed

