## Riverside

email: info@riverside-furniture.com

Davie **Bedroom** Assembly Instructions

## Made in Viet Nam


## Warning:

Mirror Frame

A

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST** BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.

## Components and Hardware List Spring Washer Ø1/4''x Ø10 Allen Head Bolt Flat Washer Allen Key M4 x 2-1/2" Support Bar Ø1/4''-20 x 1-3/8' Ø1/4"x Ø19

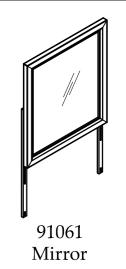

1 pc

