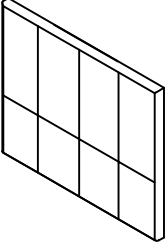









Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.




Hardware and Parts packed with the Headboard

King Leather Headboard 91085  (H-A) 1 pc.	Headboard Post (Right)  (H-B) 1 pc.	Headboard Post (Left)  (H-C) 1 pc.	Stretcher Headboard  (H-D) 1 pc.
Allen Head Bolt Ø5/16"-18 x 1-3/4"  (H-E) 10 pcs.	Spring Washer Ø5/16" x Ø13  (H-F) 10 pcs.	Flat Washer Ø5/16" x Ø19  (H-G) 10 pcs.	Allen Key M4 x 2-1/2"  (H-H) 1 pc.

Hardware and Parts packed with the Footboard

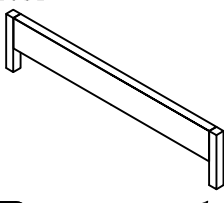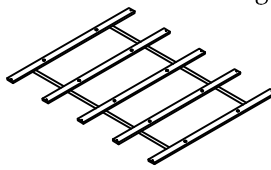King Panel Footboard 91081  (F-A) 1 pc.	Wood Slat 76" Long  (F-B) 1 Set	Wood Screw #4 x 30mm  (F-C) 10 pcs.	Support Leg 1-1/4" x 1-1/4" x 8-7/8"  (F-D) 10 pcs.	Screw Driver not included 
--	---	---	---	--

Hardware and Parts packed with the Bed Rails

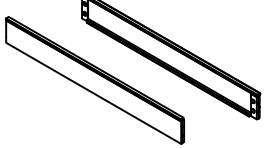
Siderail - 91072  (R-A) 2 pcs.	All-Thread Bolt Ø5/16"-18 x 3-1/2"  (R-B) 8 pcs.	Arc Washer 37x17mm  (R-C) 8 pcs.	Spring Washer Ø5/16" x Ø13mm  (R-D) 8 pcs.	Flat Washer Ø5/16" x Ø16mm  (R-E) 8 pcs.	Hex Nut Ø5/16" x 18mm  (R-F) 8 pcs.	Open Wrench 12 mm  (R-G) 1 pc.
--	--	--	--	--	---	--

6/0-6/6 King Bed

91085 -- 6/0 - 6/6 Leather Headboard


91081 -- 6/6 Footboard

91072 -- 5/0 - 6/6 Siderails

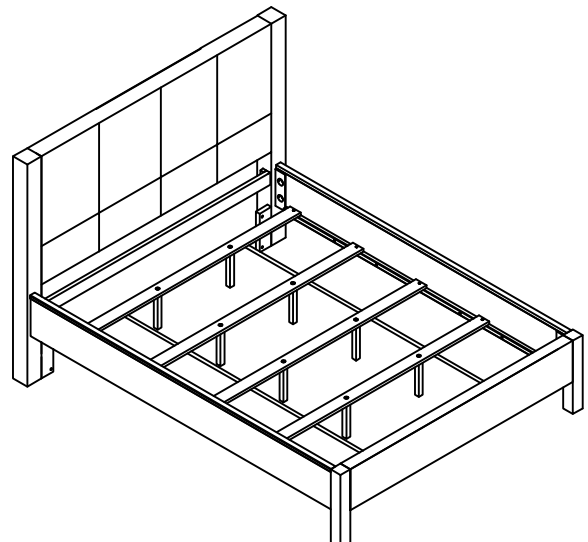


STEP 1


Open the back fabric

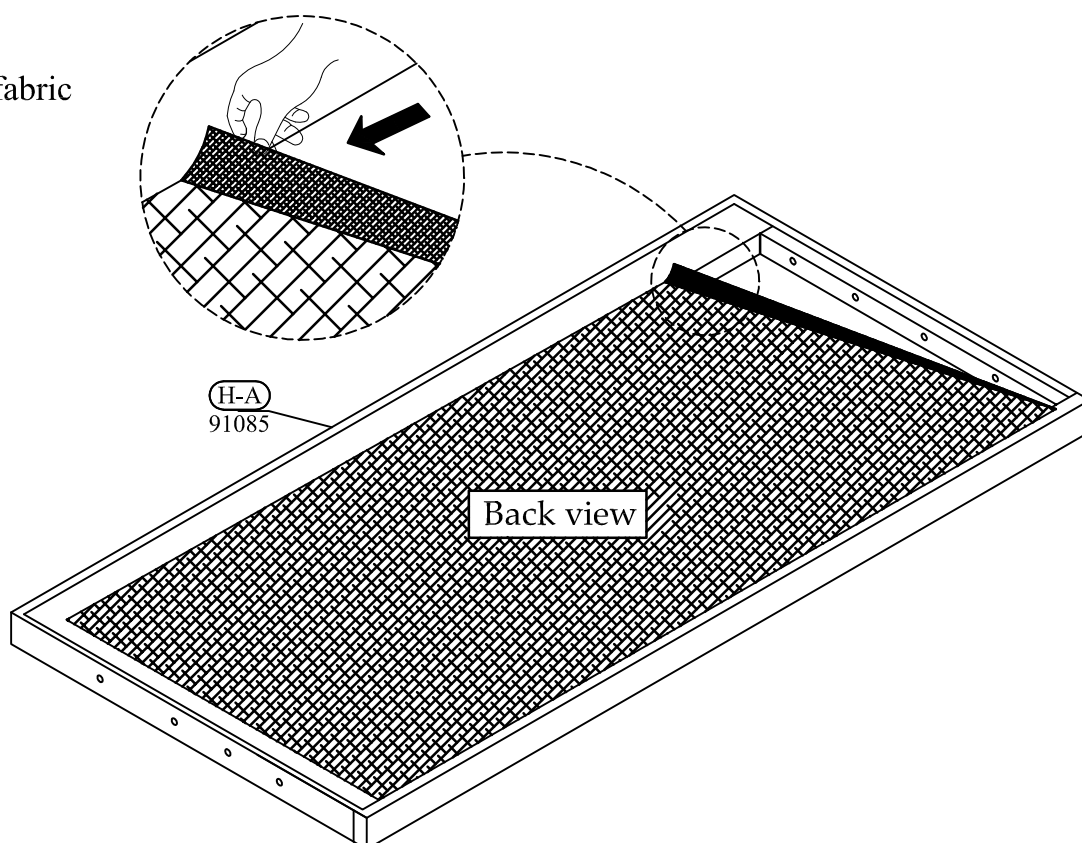


STEP 2

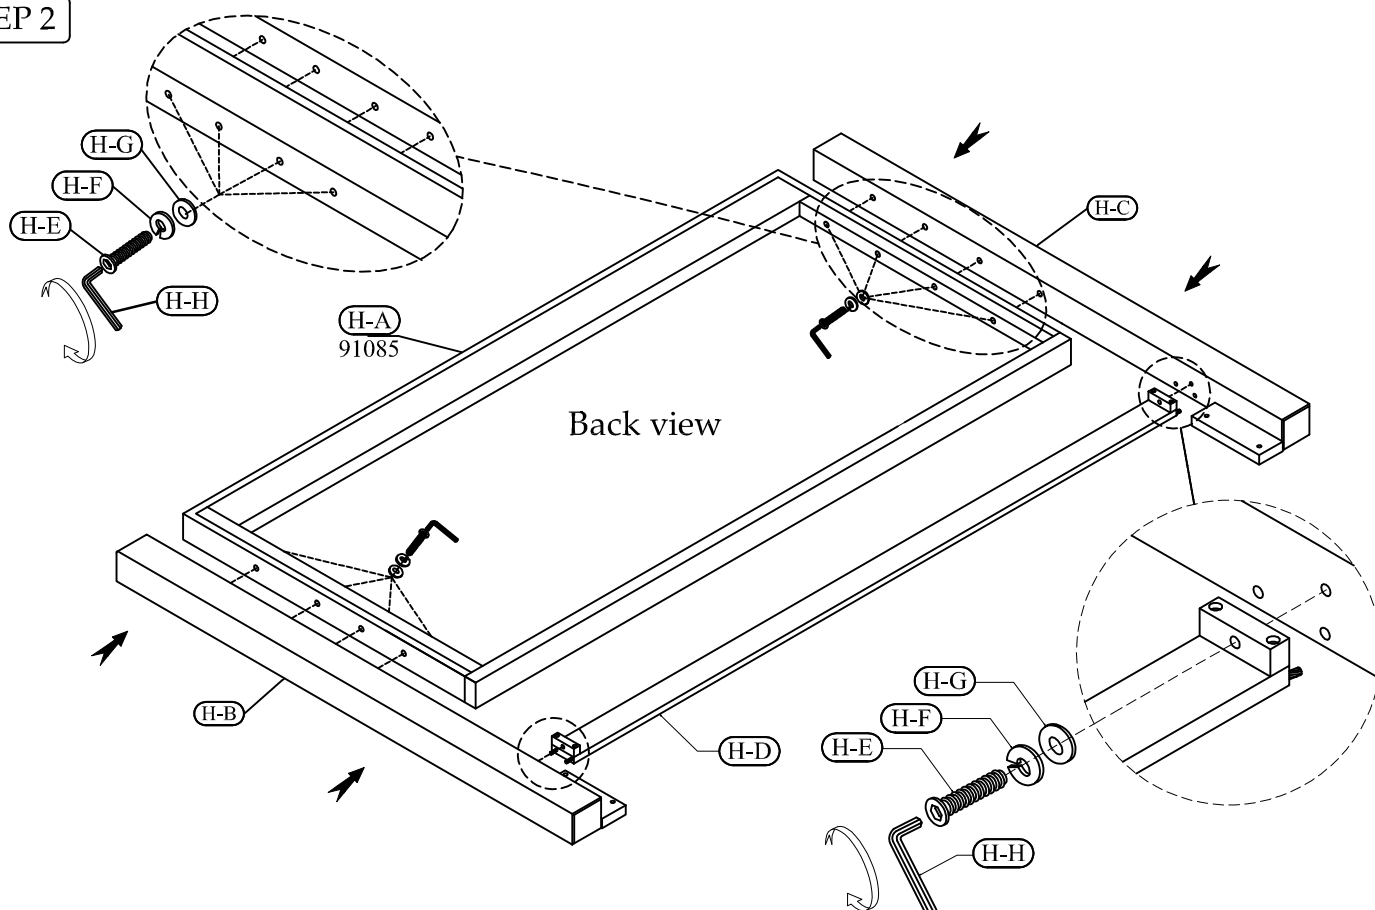


STEP 3

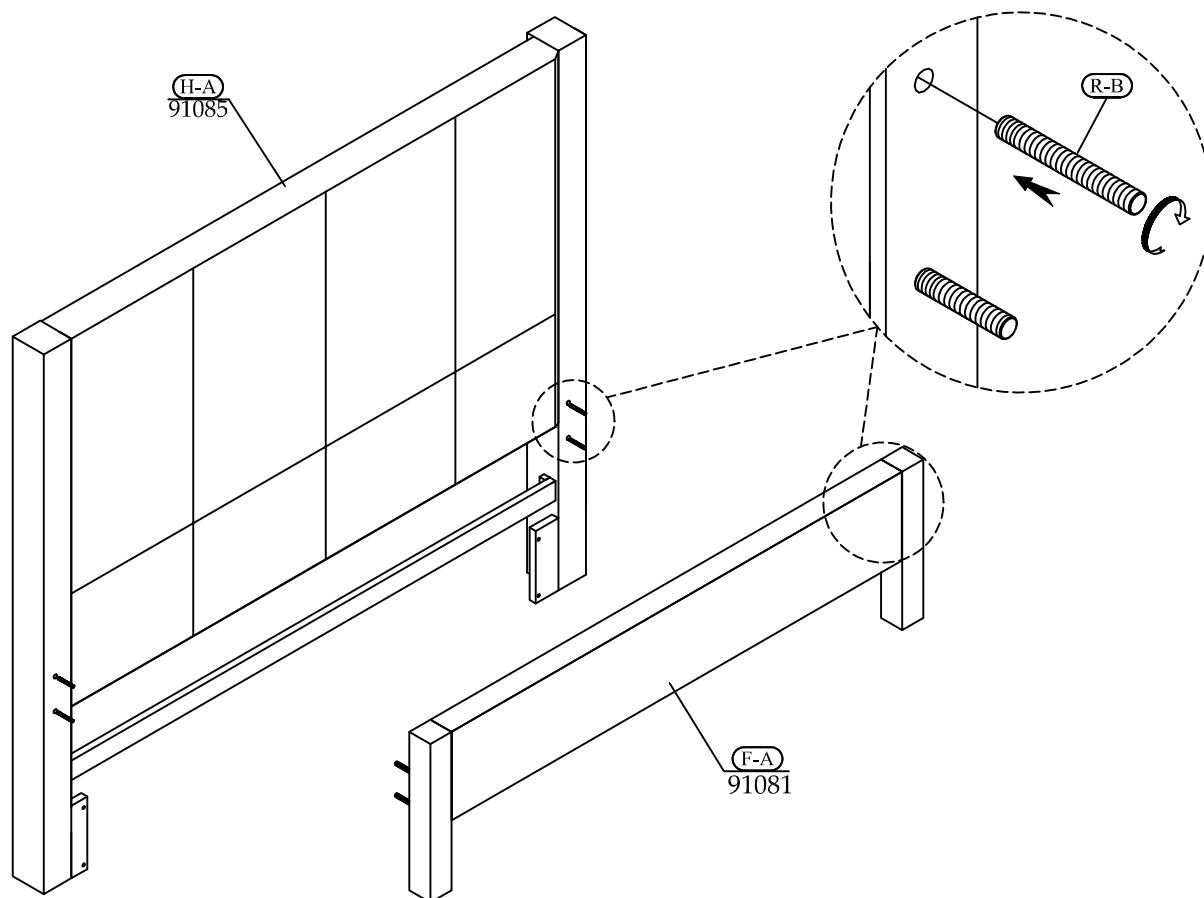


STEP 4

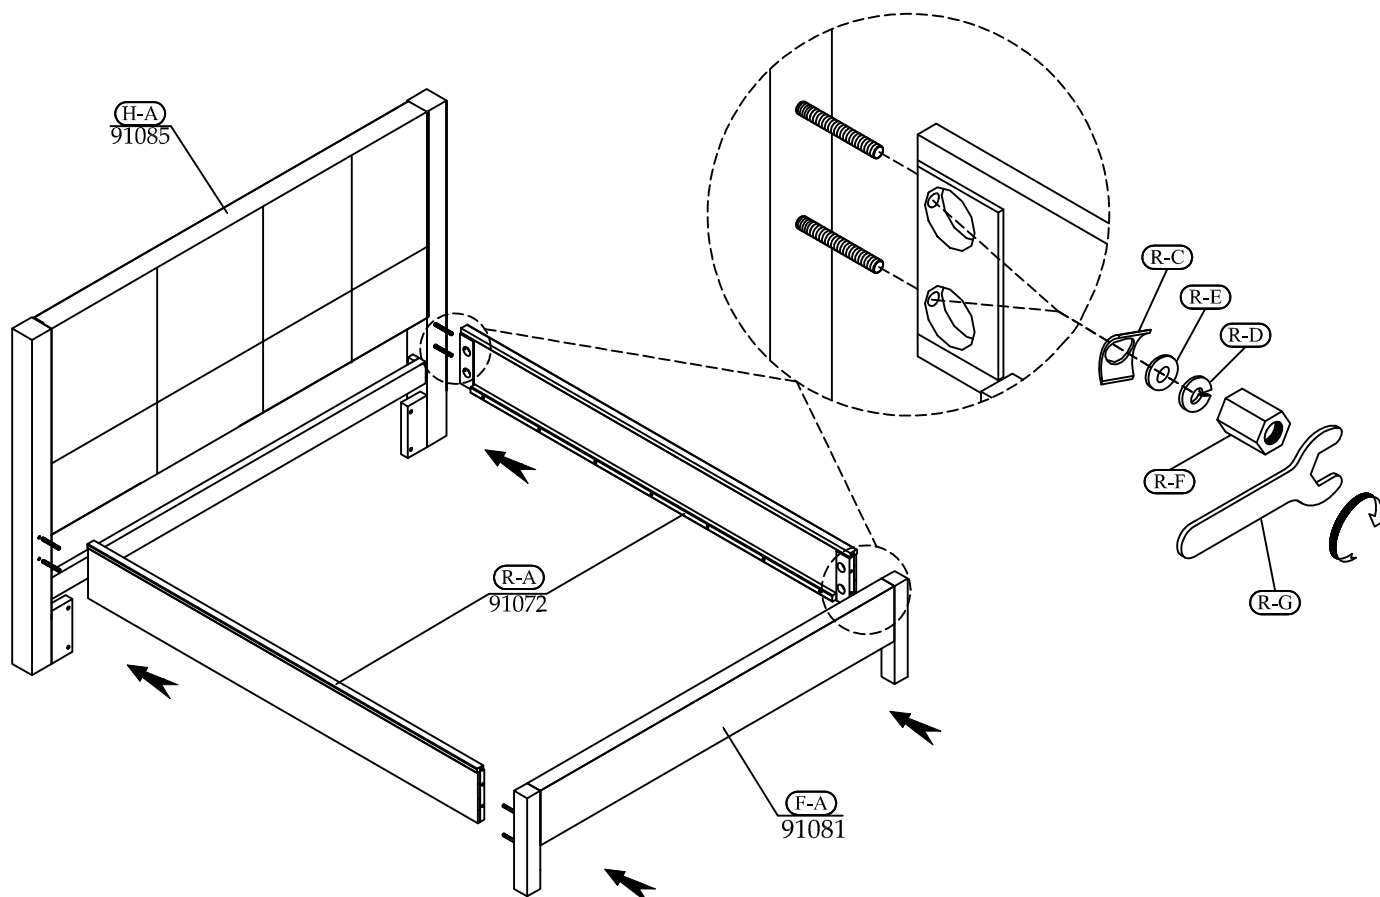

STEP 5

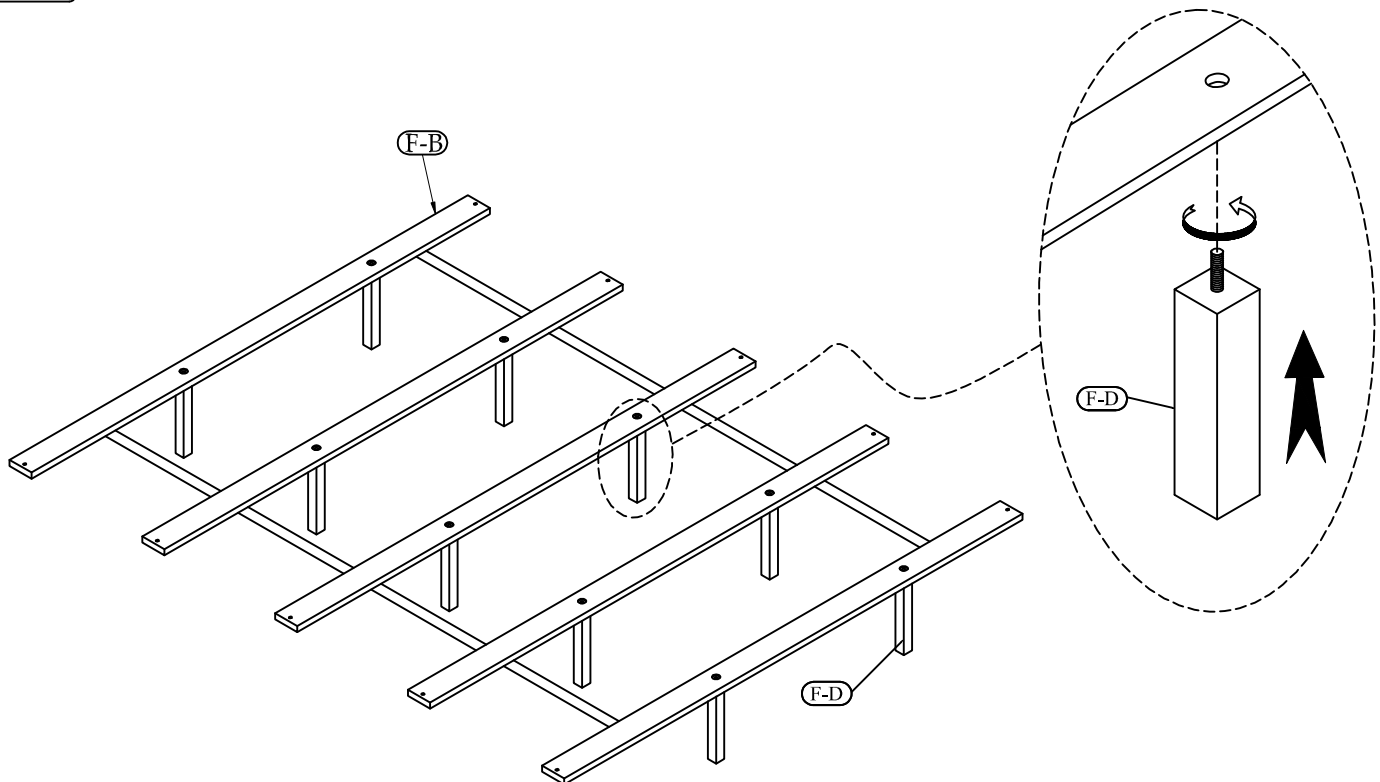


STEP 6

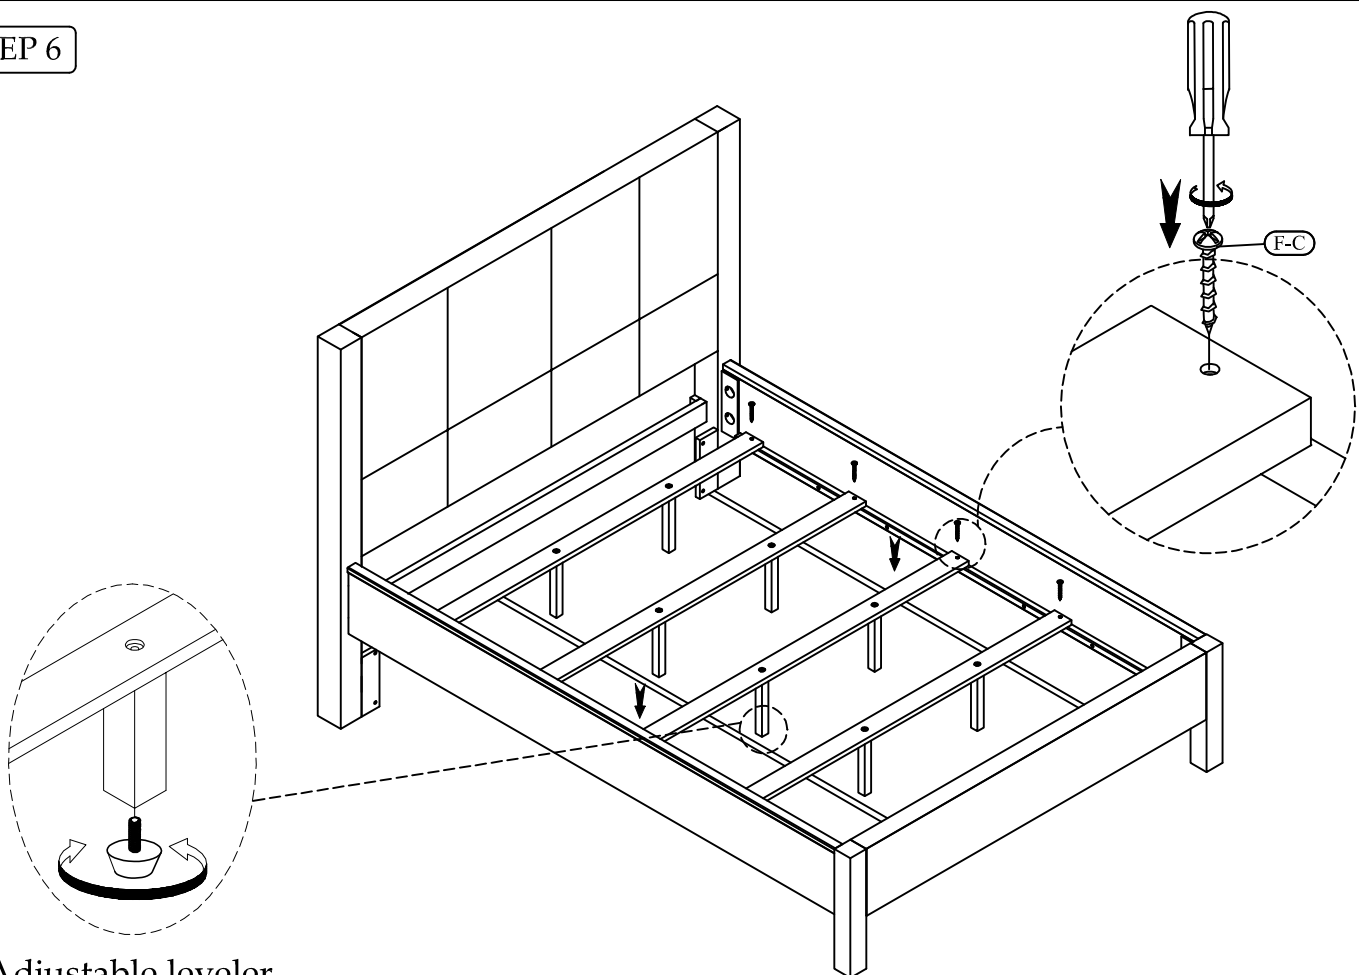

Adjustable leveler.

6/0-6/6 King Bed

91085 - 6/0 - 6/6 Leather Headboard

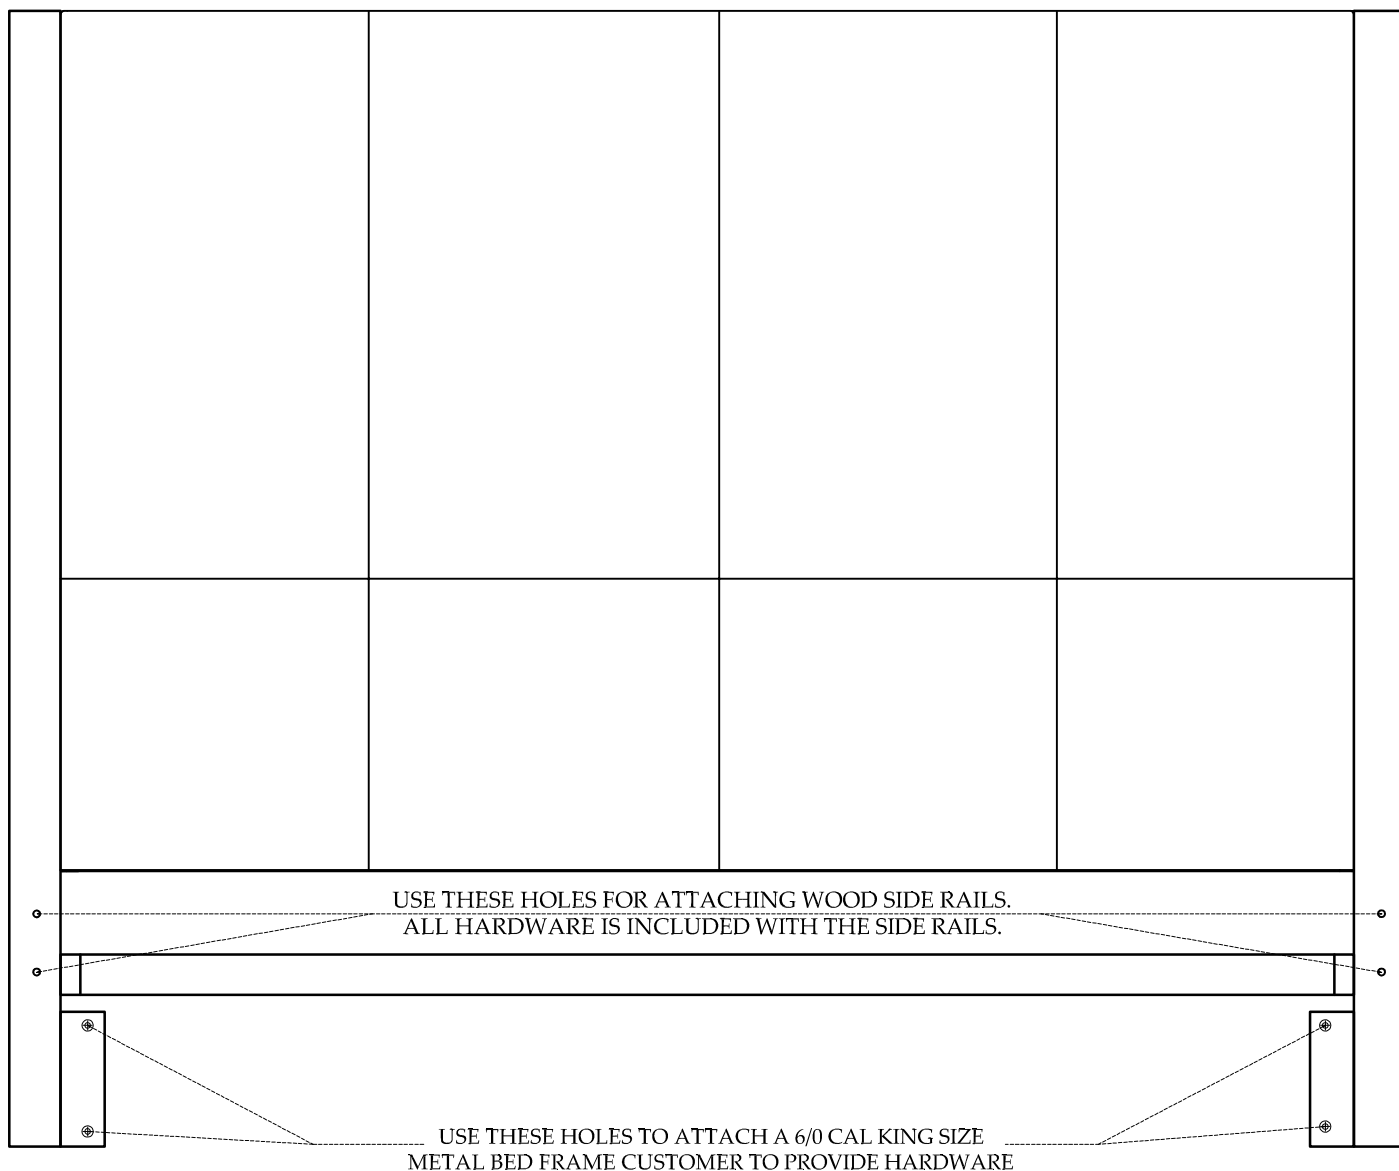

The headboard may be used alone with a Eastern King or California King size metal bed frame.