


Warning :





- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

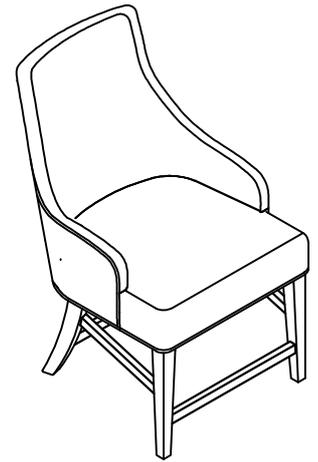


92605 / 06 / 07

Swoop Arm Uph Stool


Components and Hardware List

Seat Frame  (A) 1 pc.	Back Leg (Left)  (B) 1 pc.	Back Leg (Right)  (C) 1 pc.	Front Leg (Left)  (D) 1 pc.	Front Leg (Right)  (E) 1 pc.		
Back Stretcher 14-5/8" x 1-1/4" x 3/4"  (F) 1 pc.	Front Stretcher 20-3/8" x 1-1/4" x 3/4"  (G) 1 pc.	Side Stretcher (Left) 16-3/8" x 1-1/4" x 3/4"  (H) 1 pc.	Side Stretcher (Right) 16-3/8" x 1-1/4" x 3/4"  (I) 1 pc.	Allen Head Bolt Ø5/16" x 18 x 2-1/8"  (J) 8 pcs.	Ø5/16" Spring Washer  (K) 8 pcs.	Ø5/16" Flat Washer  (L) 8 pcs.
4mm Allen Key  (M) 1 pc.	Wood Screw Ø4x45 mm  (N) 8 pcs.	Screw Driver not included 				


STEP 1: Remove Velcro strips on the seat frame to assemble the legs.

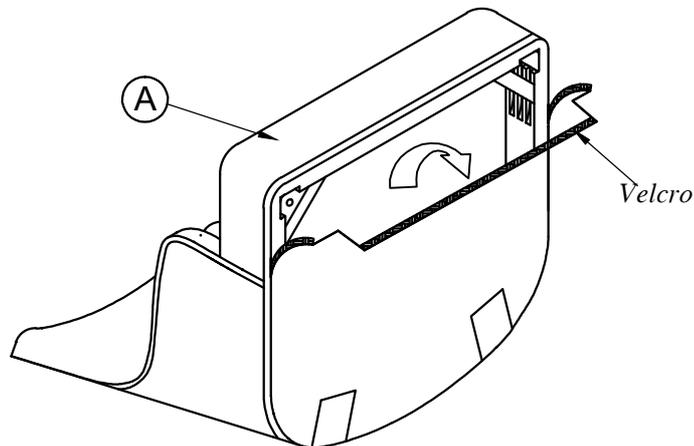


STEP 2: Do not fully tighten the screws.

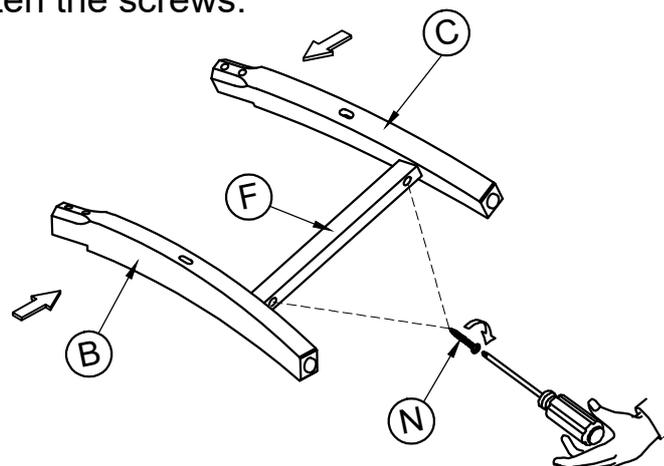


STEP 3: Do not fully tighten the bolts.

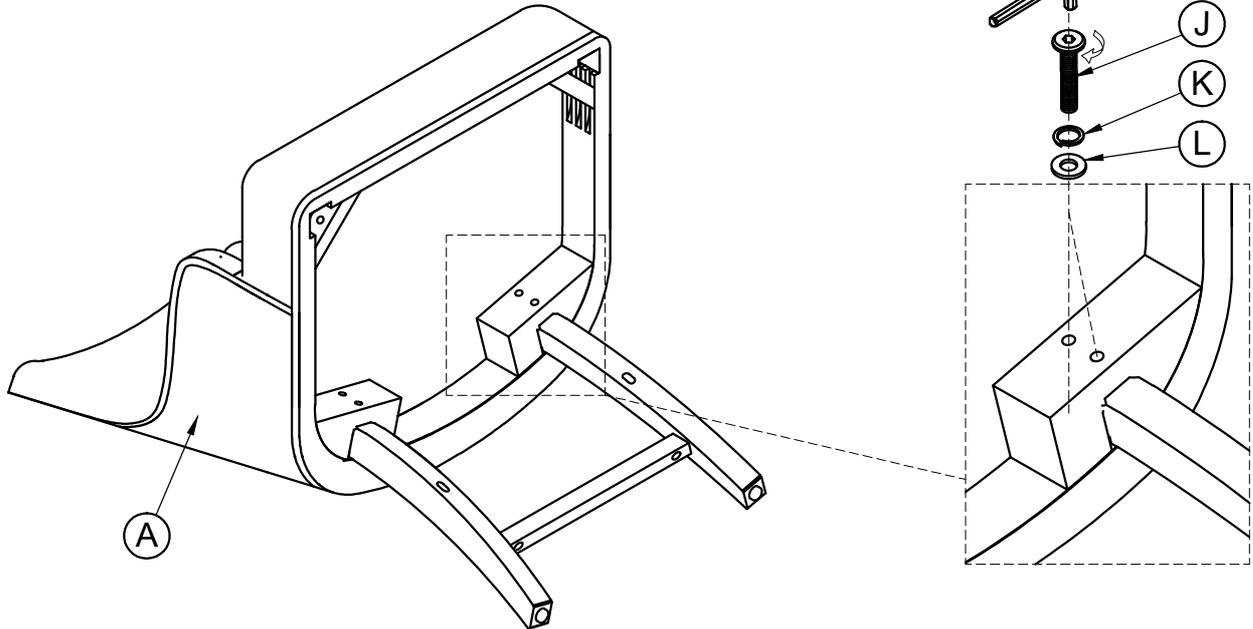


STEP 4: Do not fully tighten the screws.

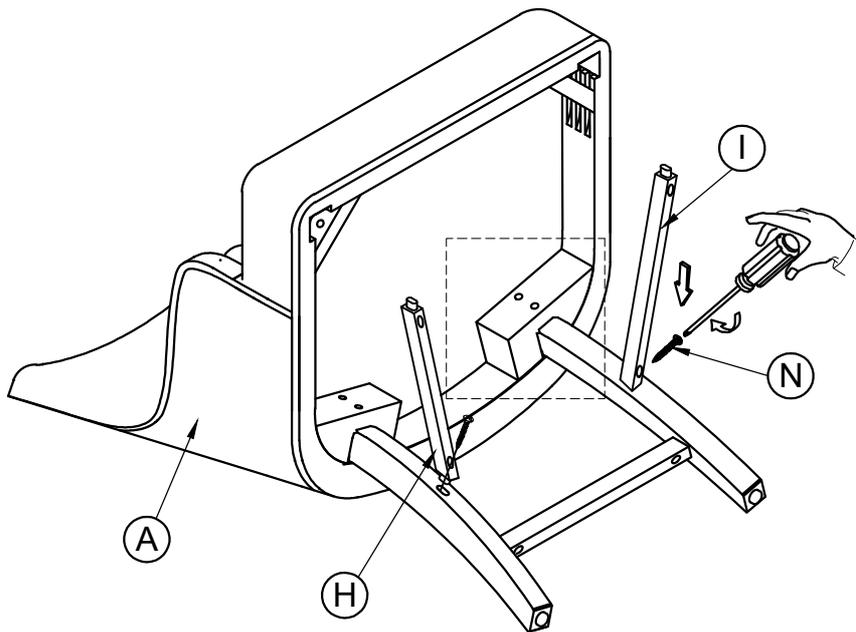

STEP 5: Do not fully tighten the screws.

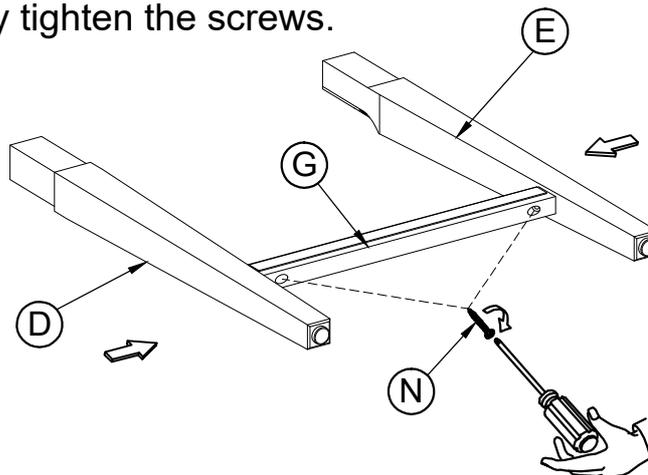


STEP 5: Using the Allen Key to tighten all bolts.

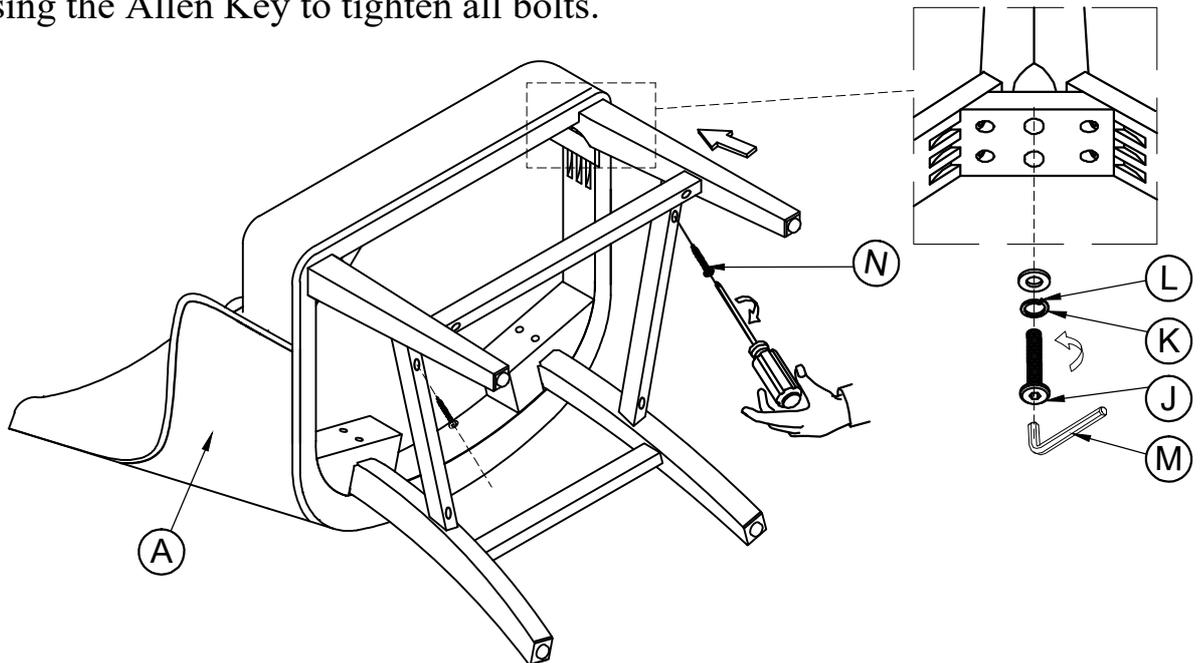

STEP 7: Using the Philips Head Screw driver to tighten all screws.

STEP 8: Attach all Velcro strips to the seat frame.

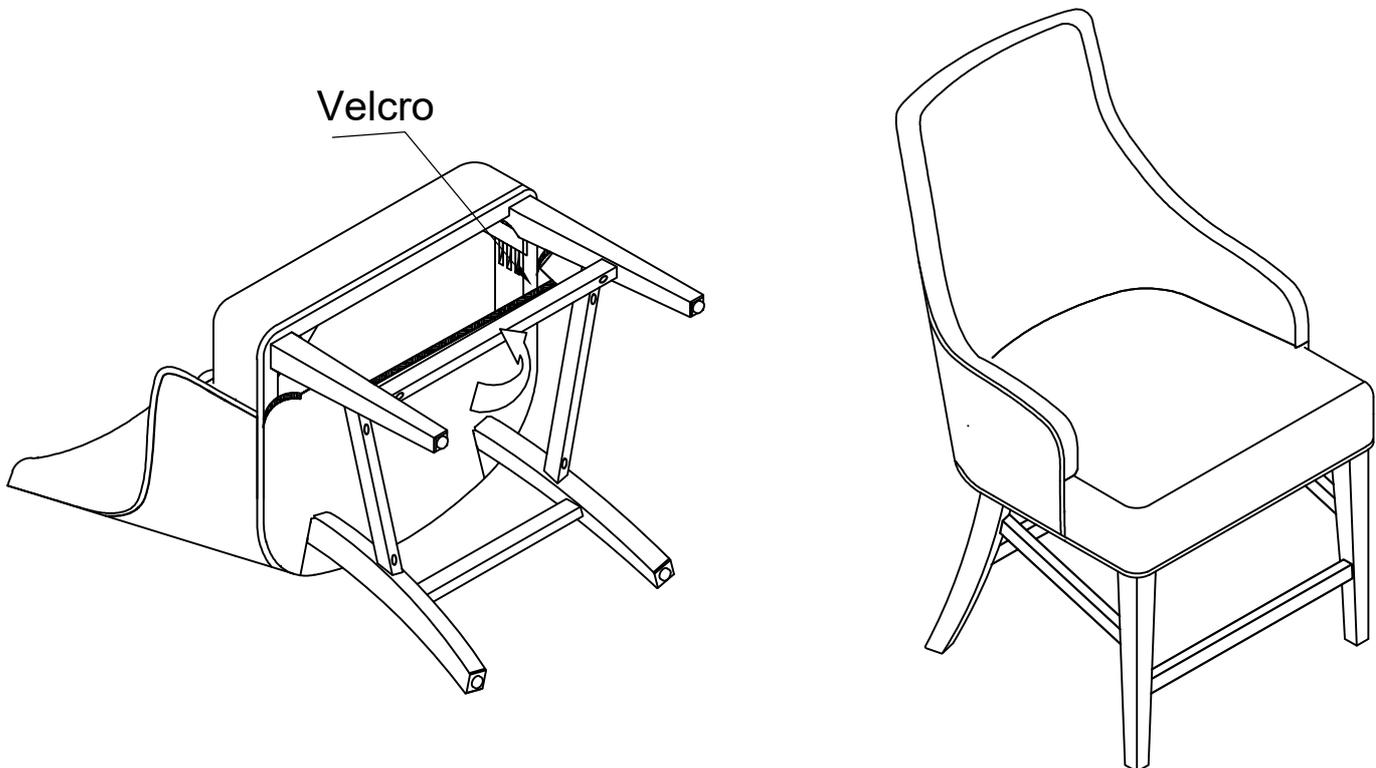

COMPLETE